


PARTS LIST

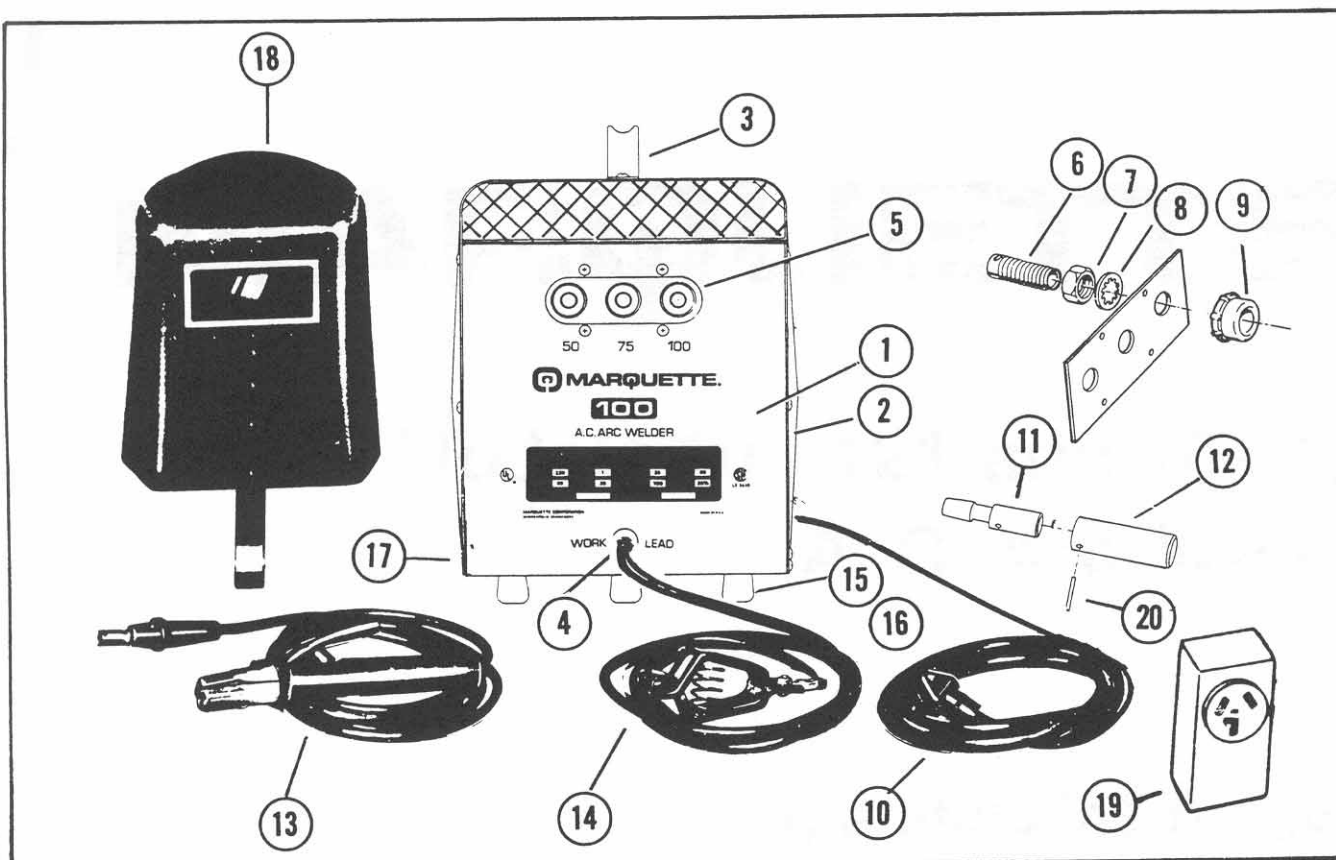

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	619-58185	Front and Base Assy.	11	611-71219	Cable Plug
2	617-58135	Cover and Back Assy.	12	649-71222	Cable Plug Insulator
3	652-58115	Handle	13	634-50965	Electrode Cable Assy.
4	665-41047	Work Lead Bushing	14	634-58131	Work Cable Assy.
5	613-40222	Terminal Panel	15	612-43951	Metal Foot
6	611-50765	Terminal Post	16	629-43872	Rubber Foot
7	699-50763	Terminal Post Nut	17	699-49786	Foot Screw
8	699-50976	Washer, Lock	18	50-107	Hand Shield
9	699-40529	Terminal Nut	19	15-914	Power Receptacle
10	633-58264	Power Cord Assy		638-58179	Power Receptacle**
	633-58119	Power Cord Assy**	20	613-71223	Insulator Pin
Not Shown	618-58140	Transformer Assy.			

** Used on 230V Welder, 10-121 only.

ORDERING INSTRUCTIONS

3

To avoid delays and assure correct replacement parts, always include the following information with the parts order:

1. Model and serial number. 2. Part number and description. 3. Quantity of parts desired.

NOTE: Do not use the Item numbers when ordering replacement parts.

* Transformer and Reactor Assembly sold complete.

Manufacturer reserves the right to make changes in design, construction or materials as necessary.