

### **Operator's Manual**

# **Power Wave<sup>®</sup> S700 Communication Kit**

For use with machines having Code Numbers: **K4352-2** 



Register your machine: www.lincolnelectric.com/registration

Authorized Service and Distributor Locator:

www.lincolnelectric.com/locator

Save for future reference

Date Purchased

Code: (ex: 10859)

Serial: (ex: U1060512345)



## INSTRUCTIONS FOR INSTALLING K4352-2 POWER WAVE S700 COMMUNICATION KIT ON A POWER WAVE S700

## **INSTALLATION INSTRUCTIONS:**

#### **OVERVIEW**:

This kit provides all necessary hardware to install a K4352-2 Power Wave S700 Communication Kit for use on a Power Wave S700.

ELECTRIC SHOCK CAN KILL	<ul> <li>Disconnect input power before servicing.</li> <li>Do not operate with covers removed.</li> <li>Do not touch electrically live parts.</li> <li>Only qualified persons should install, use or service this equipment.</li> </ul>		

Parts List Required for Installation on Power Wave S700:

ltem	Part Number	Description	
1	L17422	Communication Panel Assembly	
2	S18250-1107	Plug & Lead Assembly (4-pin plug / 4-pin plug)	1

#### **Power Wave S700 Communication Kit Installation Instructions**

Recommended Tools:


• 5/16" nut driver or other suitable tools


#### **CAUTION : PC BOARD CAN BE DAMAGED BY STATIC ELECTRICITY**

Before making any connections to a PC board, remove your body's static charge by touching unpainted grounded frame of equipment.


#### INSTALLATION:

- 1. Turn off input power to the Power Wave at the disconnect switch or fuse box before working on the Power Wave.
- 2. Remove the weld cables from the output studs, and disconnect all control cables including the Ethernet connection from the Power Wave.
- 3. Remove the UI cover plate by removing the seven screws fastening the cover plate to the power source using a 5/16<sup>°</sup> nut driver or other suitable tool (**Figure 1**). Retain the mounting hardware removed for installing the Power Wave S700 Communication Kit.
- Obtain Item 2 Plug & Lead Assembly (S18250-1107, 4 pin plug / 4 pin plug). Connect the Plug & Lead Assembly to J31 (4 pin plug) located in wiring harness of Power Wave S700 (Figure 2).
- 5. Obtain Item 1 Communication Panel Assembly provided with the kit. Route the 4-pin connector P30 of Item 2 Plug & Lead Assembly thru the case front, and to J30 of Item 1 Communication Panel Assembly (**Figure 3**).
- 6. Install the Communication Panel Assembly to the Case Front using the hardware removed from cover plate in Step 3, using a 5/16" nut driver or other suitable tool (**Figure 4**).
- 7. Replace the weld cables from the output studs, and reconnect all control cables including the Ethernet connection from the Power Wave.
- 8. The WiFi and Bluetooth are disabled as shipped from the factory.
- 9. After installing the K4352-2 Power Wave S700 Communication Kit, the Power Wave firmware may need to be updated. Visit www.powerwavesoftware.com for firmware updates and the Power Wave Utilities. Included with Power Wave Utilities are the Power Wave Manager PC tool for setting up the wireless or Bluetooth connection, and the Help Me Connect guide for setup instructions.

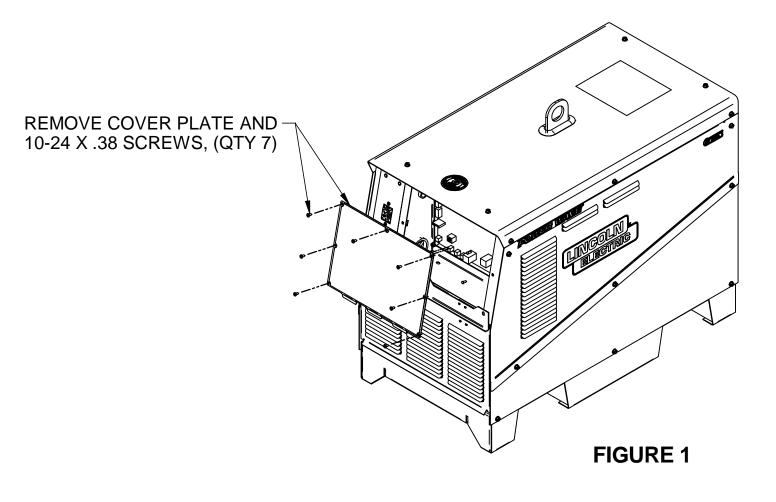

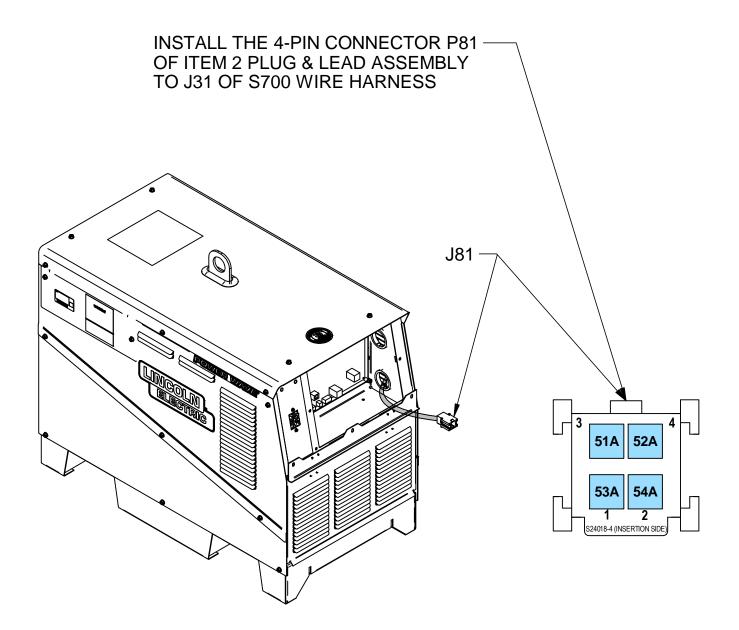


**FIGURE 2** 

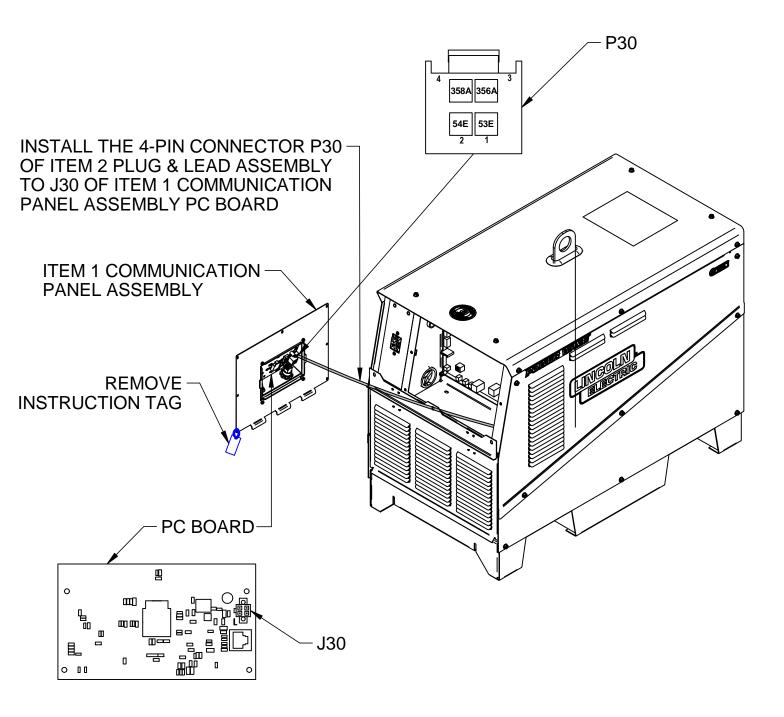

**FIGURE 3** 

#### INSTALL THE COMMUNICATION PANEL TO THE CASE FRONT USING THE HARDWARE REMOVED FROM COVER PLATE, 10-24 X .38 SCREWS (QTY 7)

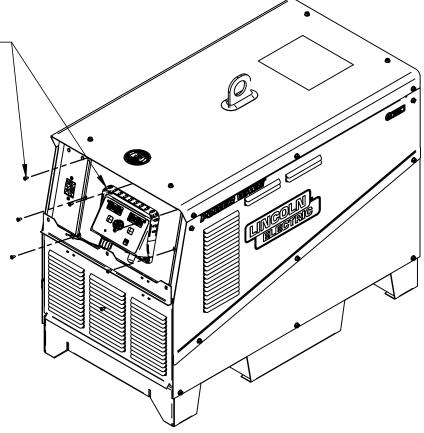

When this equipment is shipped, title passes to the purchaser upon receipt by the carrier. Consequently, claims for material damaged in shipment must be made by the purchaser against the transportation company at the time the shipment is received.

## <u>LIMITED WARRANTY</u>

STATEMENT OF WARRANTY : The Lincoln Electric Company (Lincoln) warrants to the original purchaser (end-user) of new equipment that will be free of defects in workmanship and material.

This warranty is void if Lincoln finds that the equipment has been subjected to improper care or abnormal operation.

WARRANTY PERIOD : This kit is classified by Lincoln as a field installed optional equipment and is warranted for one year, dating from the date of shipment to the original purchaser.

TO OBTAIN WARRANTY COVERAGE : You are required to notify Lincoln Electric, your Lincoln Distributor, Lincoln Service Center or Field Service Shop of any defect within the warranty period. Written notification is recommended.

WARRANTY REPAIR : If Lincoln's inspection of the equipment confirms the existence of a defect covered by this warranty, the defect will be corrected by repair or replacement at Lincoln's option.

WARRANTY COSTS : You must bear the cost of shipping the equipment to a Lincoln Service Center or Field Service shop as well as return shipment to you from that location.

#### **IMPORTANT WARRANTY LIMITATIONS**

- LINCOLN WILL NOT ACCEPT RESPONSIBILITY FOR REPAIRS MADE WITHOUT ITS AUTHORIZATION.
- LINCOLN SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES (SUCH AS LOSS OF BUSINESS, ETC.) CAUSED BY THE DEFECT OR REASONABLE DELAY IN CORRECTING THE DEFECT.
- LINCOLN'S LIABILITY UNDER THIS WARRANTY SHALL NOT EXCEED THE COST OF CORRECTING THE DEFECT.
- THIS WARRANTY IS THE ONLY EXPRESS WARRANTY PROVIDED BY LINCOLN WITH RESPECT TO ITS PRODUCTS. WARRANTIES IMPLIED BY LAW SUCH AS THE WARRANTY OF MERCHANTABILITY ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY FOR THE EQUIPMENT INVOLVED.

# 

## THE LINCOLN ELECTRIC COMPANY

World's Leader in Welding and Cutting Products Sales and Service through Subsidiaries and Distributors Worldwide Cleveland, Ohio 44117-1199 U.S.A.

WARNING	<ul> <li>Do not touch electrically live parts or electrode with skin or wet clothing.</li> <li>Insulate yourself from work and ground.</li> </ul>	• Keep flammable materials away.	• Wear eye, ear and body protection.
AVISO DE PRECAUCION	<ul> <li>No toque las partes o los electrodos bajo carga con la piel o ropa moja- da.</li> <li>Aislese del trabajo y de la tierra.</li> </ul>	<ul> <li>Mantenga el material combustible fuera del área de trabajo.</li> </ul>	<ul> <li>Protéjase los ojos, los oídos y el cuerpo.</li> </ul>
French ATTENTION	<ul> <li>Ne laissez ni la peau ni des vête- ments mouillés entrer en contact avec des pièces sous tension.</li> <li>Isolez-vous du travail et de la terre.</li> </ul>	<ul> <li>Gardez à l'écart de tout matériel inflammable.</li> </ul>	<ul> <li>Protégez vos yeux, vos oreilles et votre corps.</li> </ul>
German WARNUNG	<ul> <li>Berühren Sie keine stromführenden Teile oder Elektroden mit Ihrem Körper oder feuchter Kleidung!</li> <li>Isolieren Sie sich von den Elektroden und dem Erdboden!</li> </ul>	• Entfernen Sie brennbarres Material!	<ul> <li>Tragen Sie Augen-, Ohren- und Kör- perschutz!</li> </ul>
ATENÇÃO	<ul> <li>Não toque partes elétricas e electrodos com a pele ou roupa molhada.</li> <li>Isole-se da peça e terra.</li> </ul>	<ul> <li>Mantenha inflamáveis bem guarda- dos.</li> </ul>	<ul> <li>Use proteção para a vista, ouvido e corpo.</li> </ul>
注意事項	<ul> <li>●通電中の電気部品、又は溶材にヒ フやぬれた布で触れないこと。</li> <li>●施工物やアースから身体が絶縁さ れている様にして下さい。</li> </ul>	● 燃えやすいものの側での溶接作業 は絶対にしてはなりません。	● 目、耳及び身体に保護具をして下 さい。
Chinese	<ul> <li>●皮肤或濕衣物切勿接觸帶電部件及 銲條。</li> <li>●使你自己與地面和工件絶縁。</li> </ul>	●把一切易燃物品移離工作場所。	●佩戴眼、耳及身體勞動保護用具。
Korean 위험	● 전도체나 용접봉을 젖은 형겁 또는 피부로 절대 접촉치 마십시요. ● 모재와 접지를 접촉치 마십시요.	●인화성 물질을 접근 시키지 마시요.	●눈, 귀와 몸에 보호장구를 착용하십시요.
Arabic	لا تلمس الاجزاء التي يسري فيها التيار الكهرباني أو الالكترود بجلد الجسم أو بالملابس المبلنة بالماء. ضع عازلا على جسمك خلال العمل.	<ul> <li>ضع المواد القابلة للاشتعال في مكان بعيد.</li> </ul>	<ul> <li>ضع أدوات وملابس واقية على عينيك وأذنيك وجسمك.</li> </ul>

READ AND UNDERSTAND THE MANUFACTURER'S INSTRUCTION FOR THIS EQUIPMENT AND THE CONSUMABLES TO BE USED AND FOLLOW YOUR EMPLOYER'S SAFETY PRACTICES.

SE RECOMIENDA LEER Y ENTENDER LAS INSTRUCCIONES DEL FABRICANTE PARA EL USO DE ESTE EQUIPO Y LOS CONSUMIBLES QUE VA A UTILIZAR, SIGA LAS MEDIDAS DE SEGURIDAD DE SU SUPERVISOR.

LISEZ ET COMPRENEZ LES INSTRUCTIONS DU FABRICANT EN CE QUI REGARDE CET EQUIPMENT ET LES PRODUITS A ETRE EMPLOYES ET SUIVEZ LES PROCEDURES DE SECURITE DE VOTRE EMPLOYEUR.

LESEN SIE UND BEFOLGEN SIE DIE BETRIEBSANLEITUNG DER ANLAGE UND DEN ELEKTRODENEINSATZ DES HER-Stellers. Die Unfallverhütungsvorschriften des Arbeitgebers sind ebenfalls zu beachten.

	Ĩ,		
<ul> <li>Keep your head out of fumes.</li> <li>Use ventilation or exhaust to remove fumes from breathing zone.</li> </ul>	<ul> <li>Turn power off before servicing.</li> </ul>	<ul> <li>Do not operate with panel open or guards off.</li> </ul>	WARNING
<ul> <li>Los humos fuera de la zona de respiración.</li> <li>Mantenga la cabeza fuera de los humos. Utilice ventilación o aspiración para gases.</li> </ul>	<ul> <li>Desconectar el cable de ali- mentación de poder de la máquina antes de iniciar cualquier servicio.</li> </ul>	<ul> <li>No operar con panel abierto o guardas quitadas.</li> </ul>	AVISO DE PRECAUCION
<ul> <li>Gardez la tête à l'écart des fumées.</li> <li>Utilisez un ventilateur ou un aspira- teur pour ôter les fumées des zones de travail.</li> </ul>	<ul> <li>Débranchez le courant avant l'entre- tien.</li> </ul>	<ul> <li>N'opérez pas avec les panneaux ouverts ou avec les dispositifs de protection enlevés.</li> </ul>	French ATTENTION
<ul> <li>Vermeiden Sie das Einatmen von Schweibrauch!</li> <li>Sorgen Sie für gute Be- und Entlüftung des Arbeitsplatzes!</li> </ul>	<ul> <li>Strom vor Wartungsarbeiten abschalten! (Netzstrom völlig öff- nen; Maschine anhalten!)</li> </ul>	<ul> <li>Anlage nie ohne Schutzgehäuse oder Innenschutzverkleidung in Betrieb setzen!</li> </ul>	German WARNUNG
<ul> <li>Mantenha seu rosto da fumaça.</li> <li>Use ventilação e exhaustão para remover fumo da zona respiratória.</li> </ul>	<ul> <li>Não opere com as tampas removidas.</li> <li>Desligue a corrente antes de fazer serviço.</li> <li>Não toque as partes elétricas nuas.</li> </ul>	<ul> <li>Mantenha-se afastado das partes moventes.</li> <li>Não opere com os paineis abertos ou guardas removidas.</li> </ul>	Portuguese ATENÇÃO
<ul> <li>● ヒュームから頭を離すようにして 下さい。</li> <li>● 換気や排煙に十分留意して下さい。</li> </ul>	● メンテナンス・サービスに取りか かる際には、まず電源スイッチを 必ず切って下さい。	● パネルやカバーを取り外したまま で機械操作をしないで下さい。	注意事項
●頭部遠離煙霧。 ●在呼吸區使用通風或排風器除煙。	● 維修前切斷電源。	●儀表板打開或沒有安全罩時不準作 業。	Chinese 营告
<ul> <li>얼굴로부터 용접가스를 멀리하십시요.</li> <li>호홉지역으로부터 용접가스를 제거하기 위해 가스제거기나 통풍기를 사용하십시요.</li> </ul>	● 보수전에 전원을 차단하십시요.	● 판넬이 열린 상태로 작동치 마십시요.	Korean 위 험
<ul> <li>ابعد رأسك بعيداً عن الدخان.</li> <li>استعمل التهوية أو جهاز ضغط الدخان للخارج</li> <li>لكي تبعد الدخان عن المنطقة التي تتنفس فيها.</li> </ul>	<ul> <li>اقطع التيار الكهربائي قبل القيام بأية صيانة.</li> </ul>	<ul> <li>لا تشغل هذا الجهاز اذا كانت الاغطية الحديدية الواقية ليست عليه.</li> </ul>	Arabic تحذیر

# LEIA E COMPREENDA AS INSTRUÇÕES DO FABRICANTE PARA ESTE EQUIPAMENTO E AS PARTES DE USO, E SIGA AS PRÁTICAS DE SEGURANÇA DO EMPREGADOR.

使う機械や溶材のメーカーの指示書をよく読み、まず理解して下さい。そして貴社の安全規定に従って下さい。

請詳細閱讀並理解製造廠提供的説明以及應該使用的銀捍材料,並請遵守貴方的有関勞動保護規定。

이 제품에 동봉된 작업지침서를 숙지하시고 귀사의 작업자 안전수칙을 준수하시기 바랍니다.

اقرأ بتمعن وافهم تعليمات المصنع المنتج لهذه المعدات والمواد قبل استعمالها واتبع تعليمات الوقاية لصاحب العمل.

#### CUSTOMER ASSISTANCE POLICY

The business of The Lincoln Electric Company is manufacturing and selling high quality welding equipment, consumables, and cutting equipment. Our challenge is to meet the needs of our customers and to exceed their expectations. On occasion, purchasers may ask Lincoln Electric for advice or information about their use of our products. We respond to our customers based on the best information in our possession at that time. Lincoln Electric is not in a position to warrant or guarantee such advice, and assumes no liability, with respect to such information or advice. We expressly disclaim any warranty of any kind, including any warranty of fitness for any customer's particular purpose, with respect to such information or advice. As a matter of practical consideration, we also cannot assume any responsibility for updating or correcting any such information or advice once it has been given, nor does the provision of information or advice create, expand or alter any warranty with respect to the sale of our products.

Lincoln Electric is a responsive manufacturer, but the selection and use of specific products sold by Lincoln Electric is solely within the control of, and remains the sole responsibility of the customer. Many variables beyond the control of Lincoln Electric affect the results obtained in applying these types of fabrication methods and service requirements.

Subject to Change – This information is accurate to the best of our knowledge at the time of printing. Please refer to www.lincolnelectric.com for any updated information.



THE LINCOLN ELECTRIC COMPANY 22801 St. Clair Avenue • Cleveland, OH • 44117-1199 • U.S.A. Phone: +1.216.481.8100 • www.lincolnelectric.com