


Flex Lase Handheld Laser System

Initial Startup Instructions

An activation code is required to operate your Flex Lase™ Handheld Laser System. Follow the steps below – it should only take a few minutes.

1. Scan the **QR code** located on the equipment hang tag or in the operator's manual or visit <https://lered.info/4gLugJk>.
2. Follow the steps to **register your equipment**. The serial number starts with "L" and is located on the side of the Flex Lase 20 Power Source.

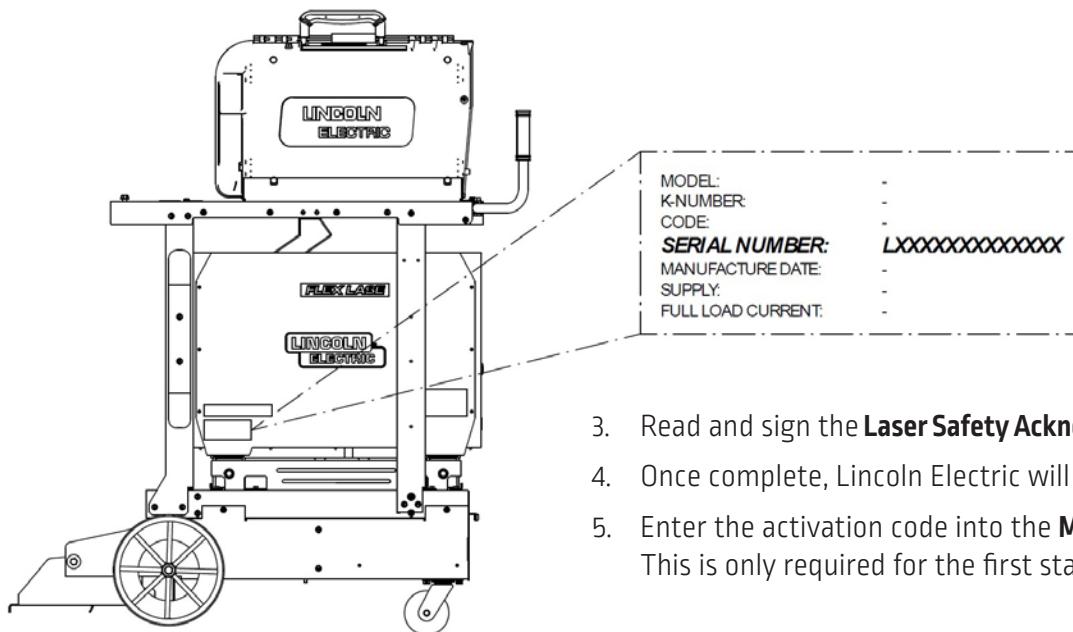

3. Read and sign the **Laser Safety Acknowledgement**.
4. Once complete, Lincoln Electric will send you an email that includes your **activation code**.
5. Enter the activation code into the **Machine Settings Tab** of the Flex Lase 20 user interface. This is only required for the first startup of the power source.

