



# FX360 WIRING DIAGRAM G8141-3 REV: B

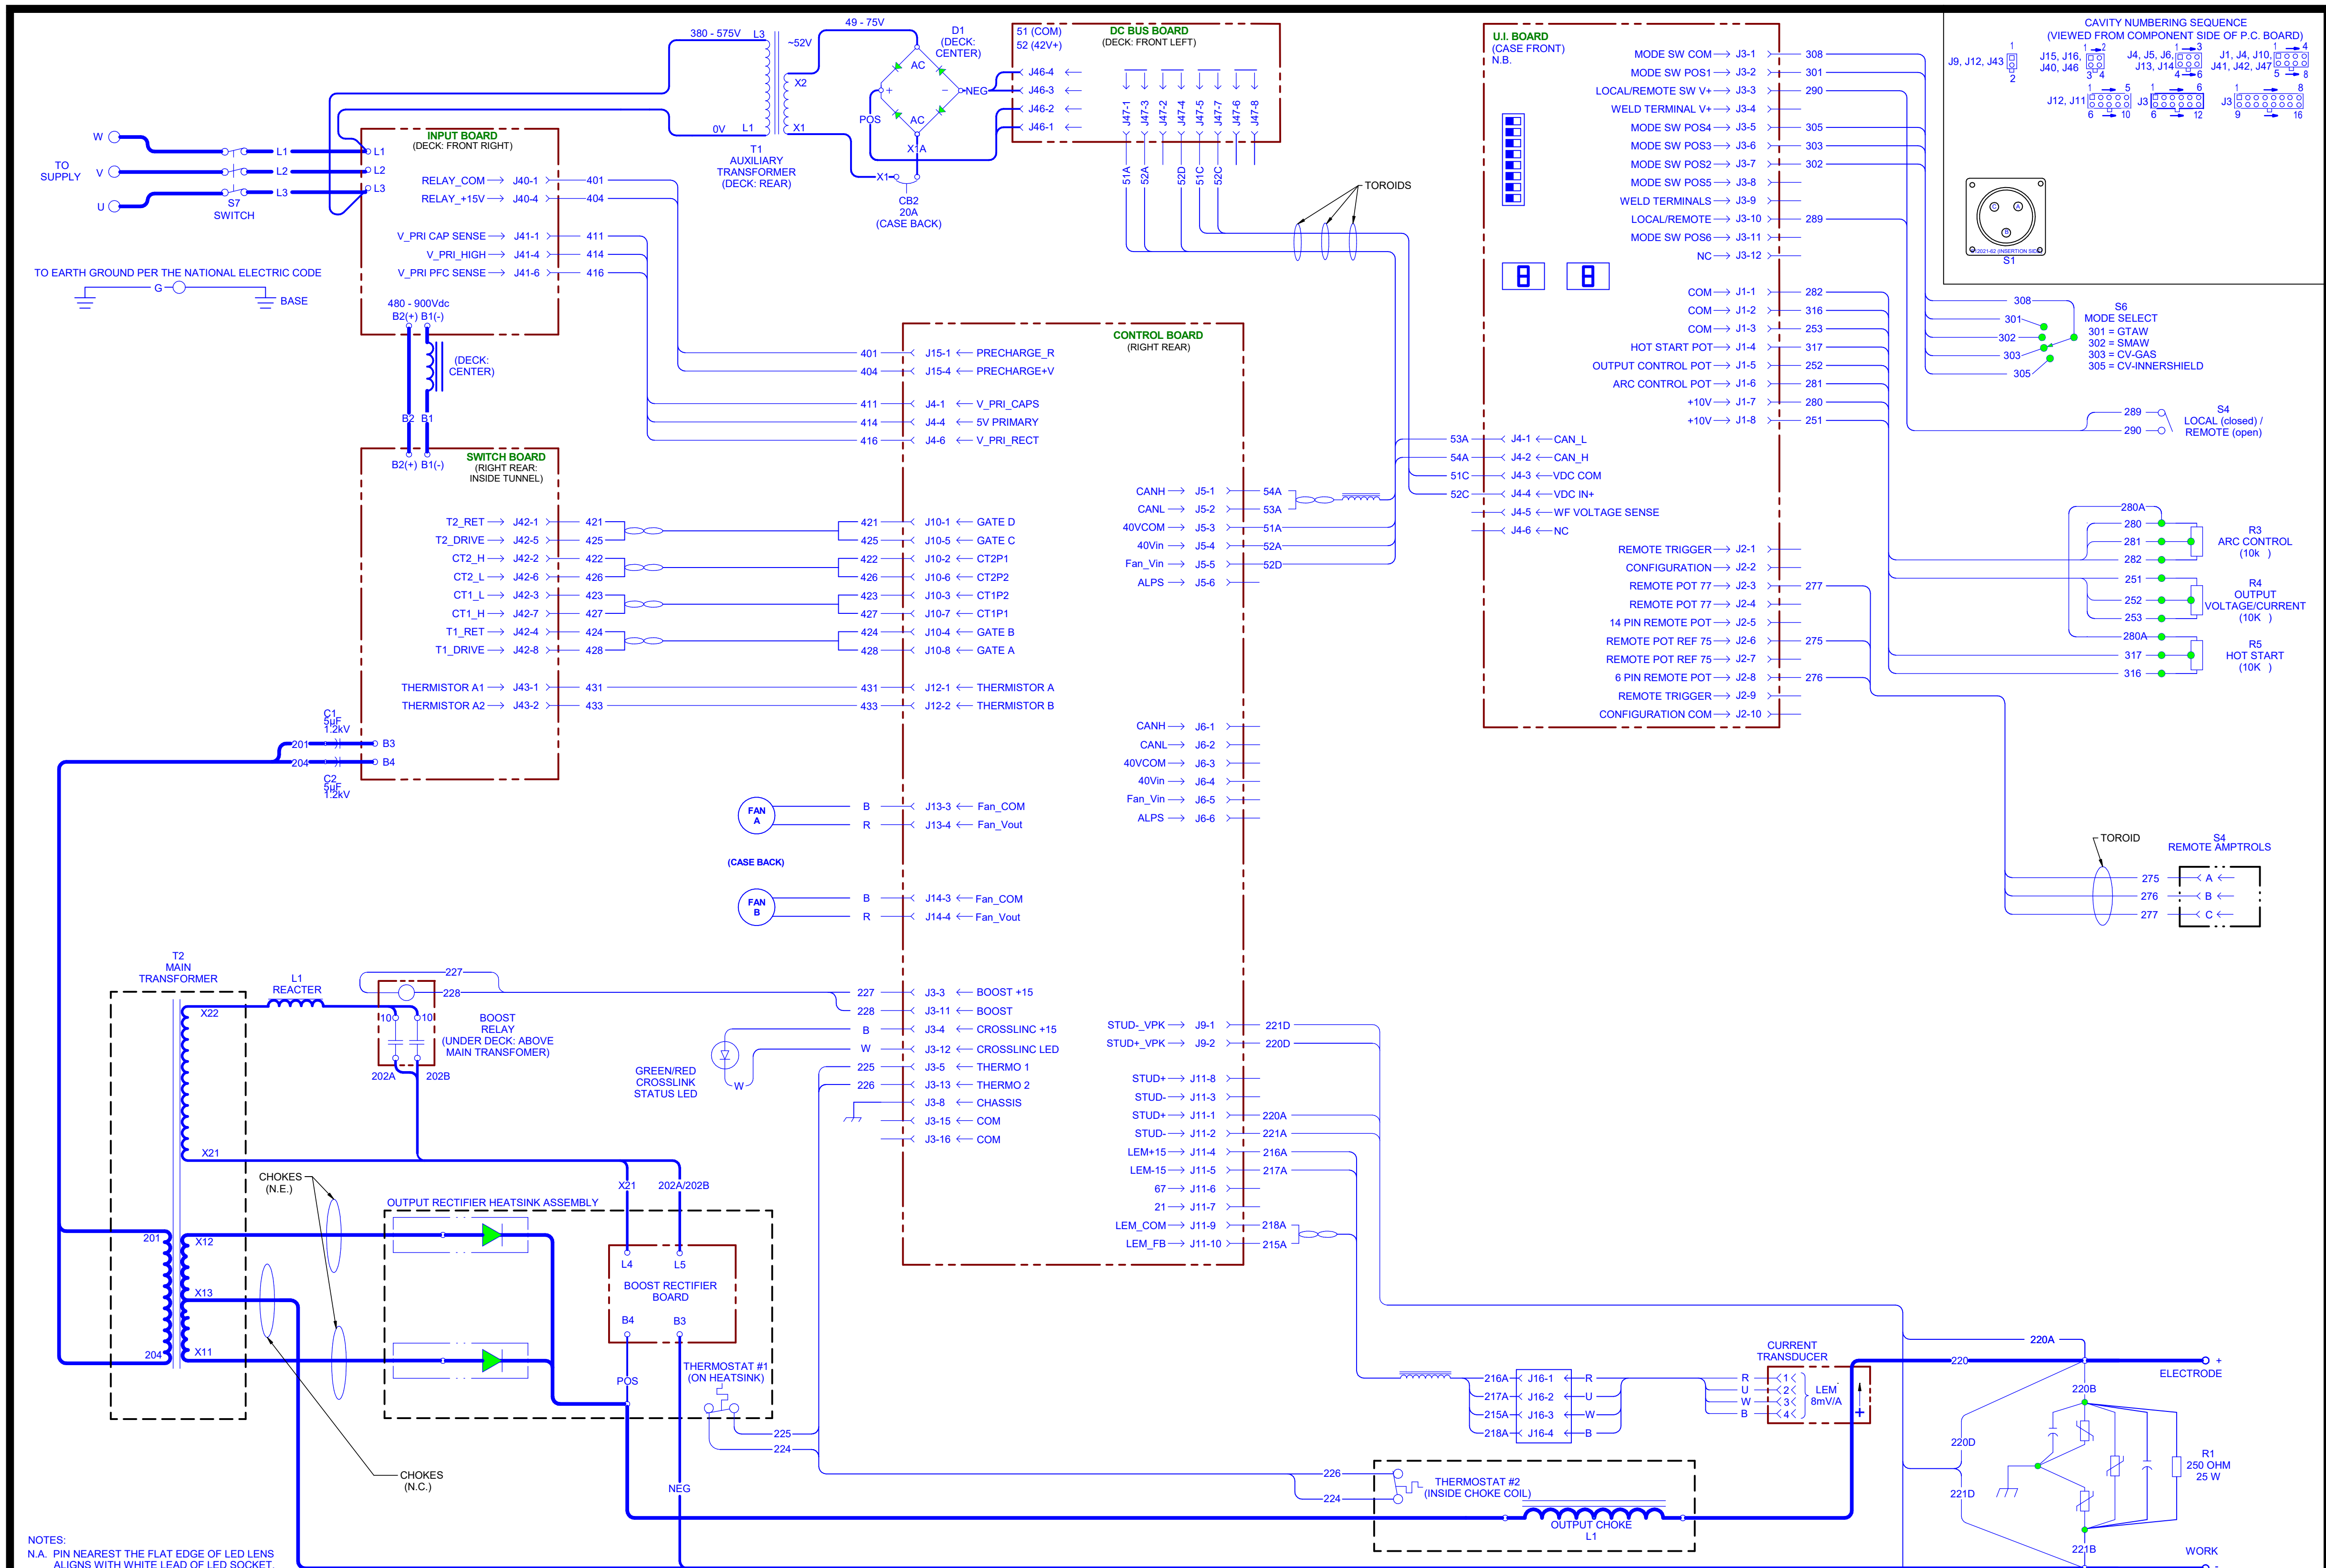


NOTES:  
 N.A. PIN NEAREST THE FLAT EDGE OF LED LENS  
 ALIGNS WITH WHITE LEAD OF LED SOCKET.  
 N.B. LEDs ARE ONLY ACTIVE IF VRD IS TURNED ON. TURN ON VRD  
 BY PLACING DIP SWITCH 5 ON CONTROL BOARD IN THE "ON" POSITION.  
 N.C. ONE CHOKE PER WIRE.  
 N.D. ELECTRICAL SYMBOLS PER E1537.  
 N.E. TWO CHOKES PER WIRE.




### SWITCHBOARD

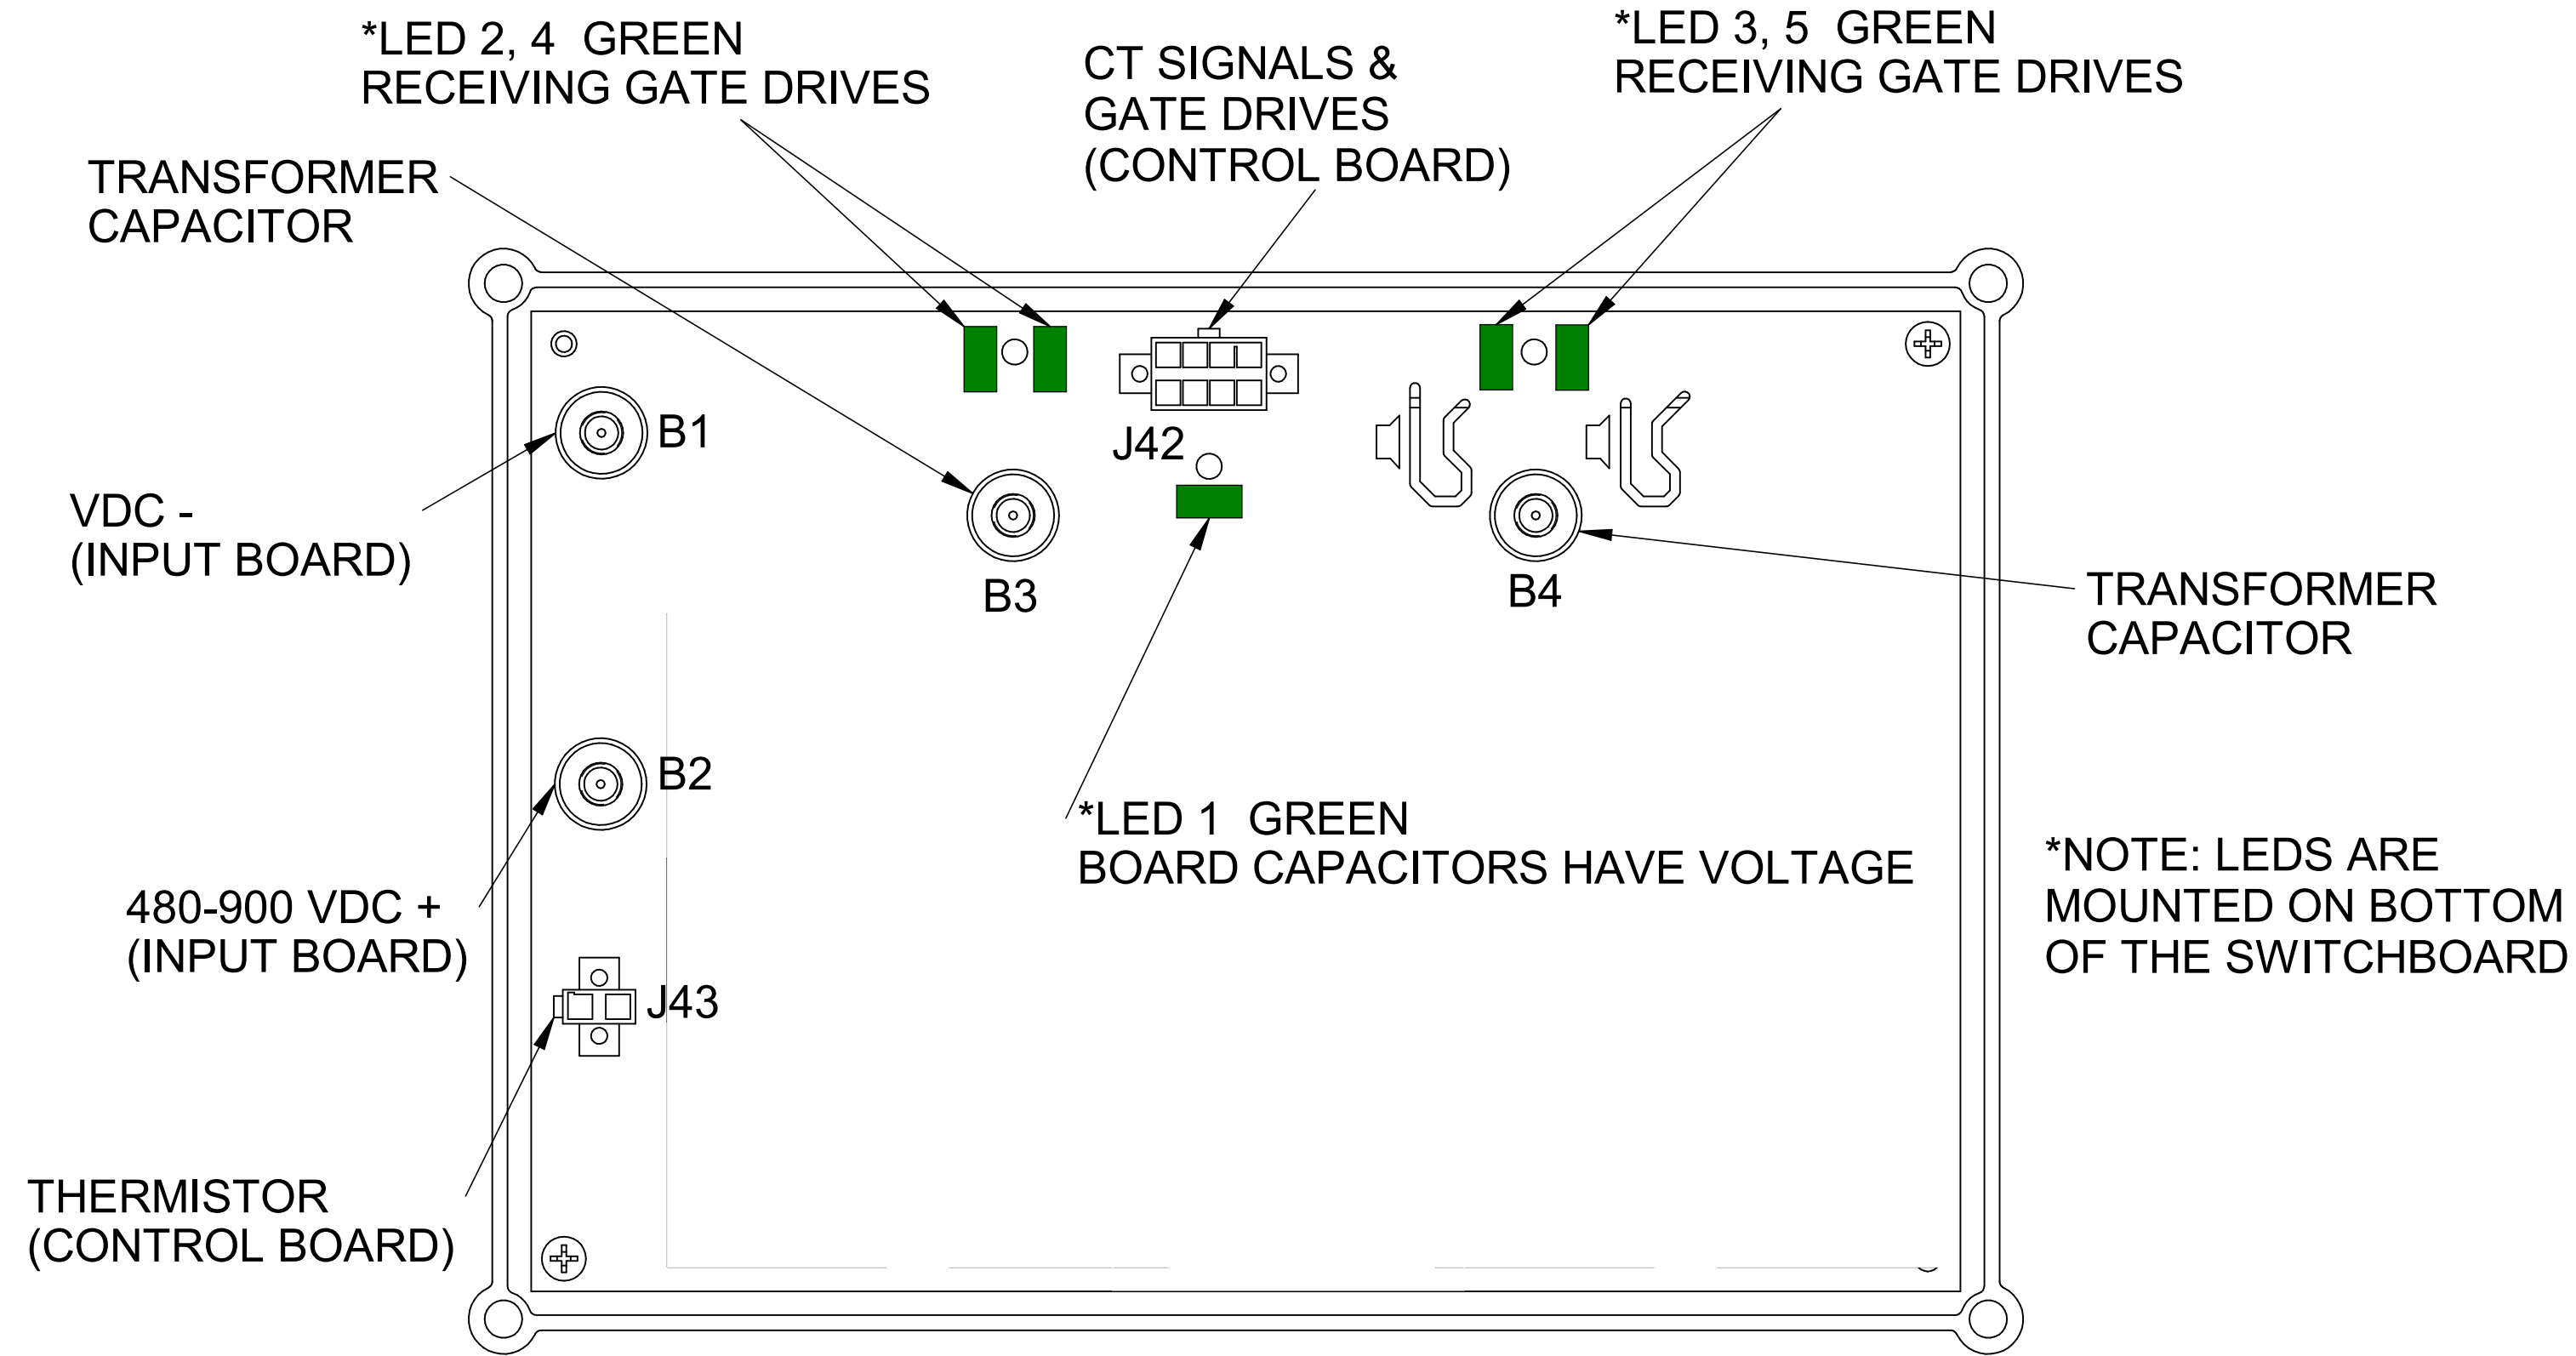


### INPUT P.C. BOARD

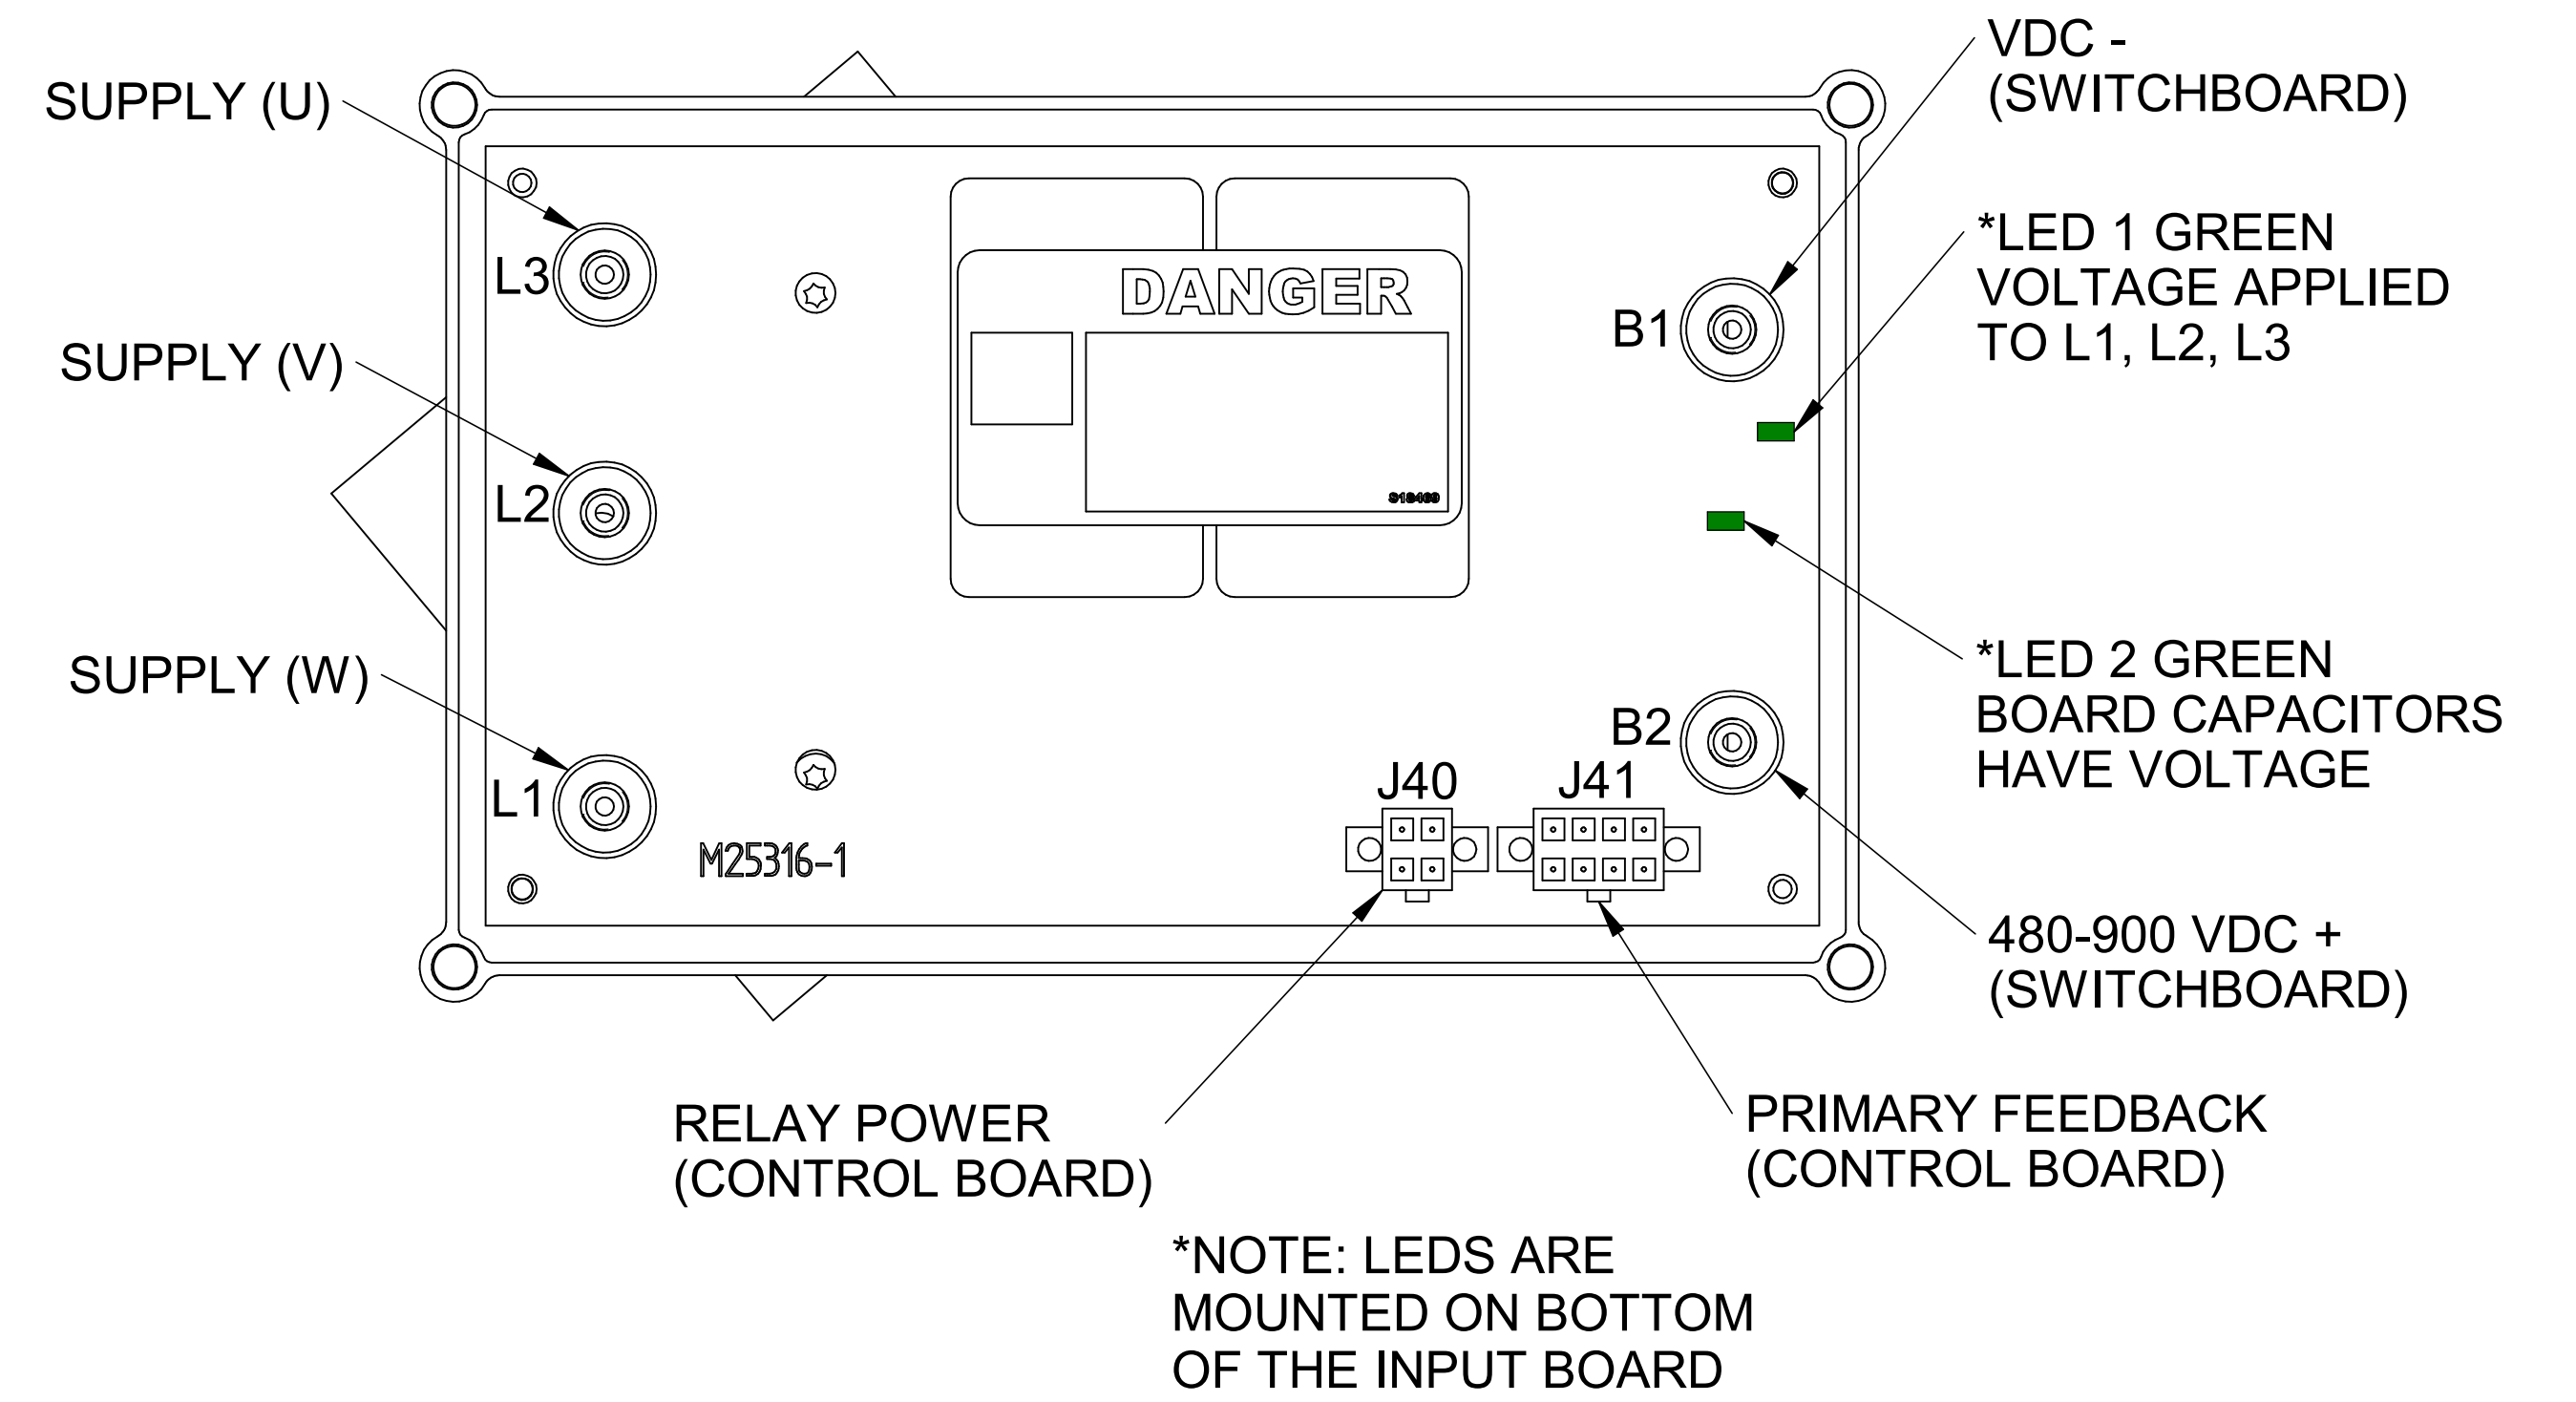

### CONTROL BOARD

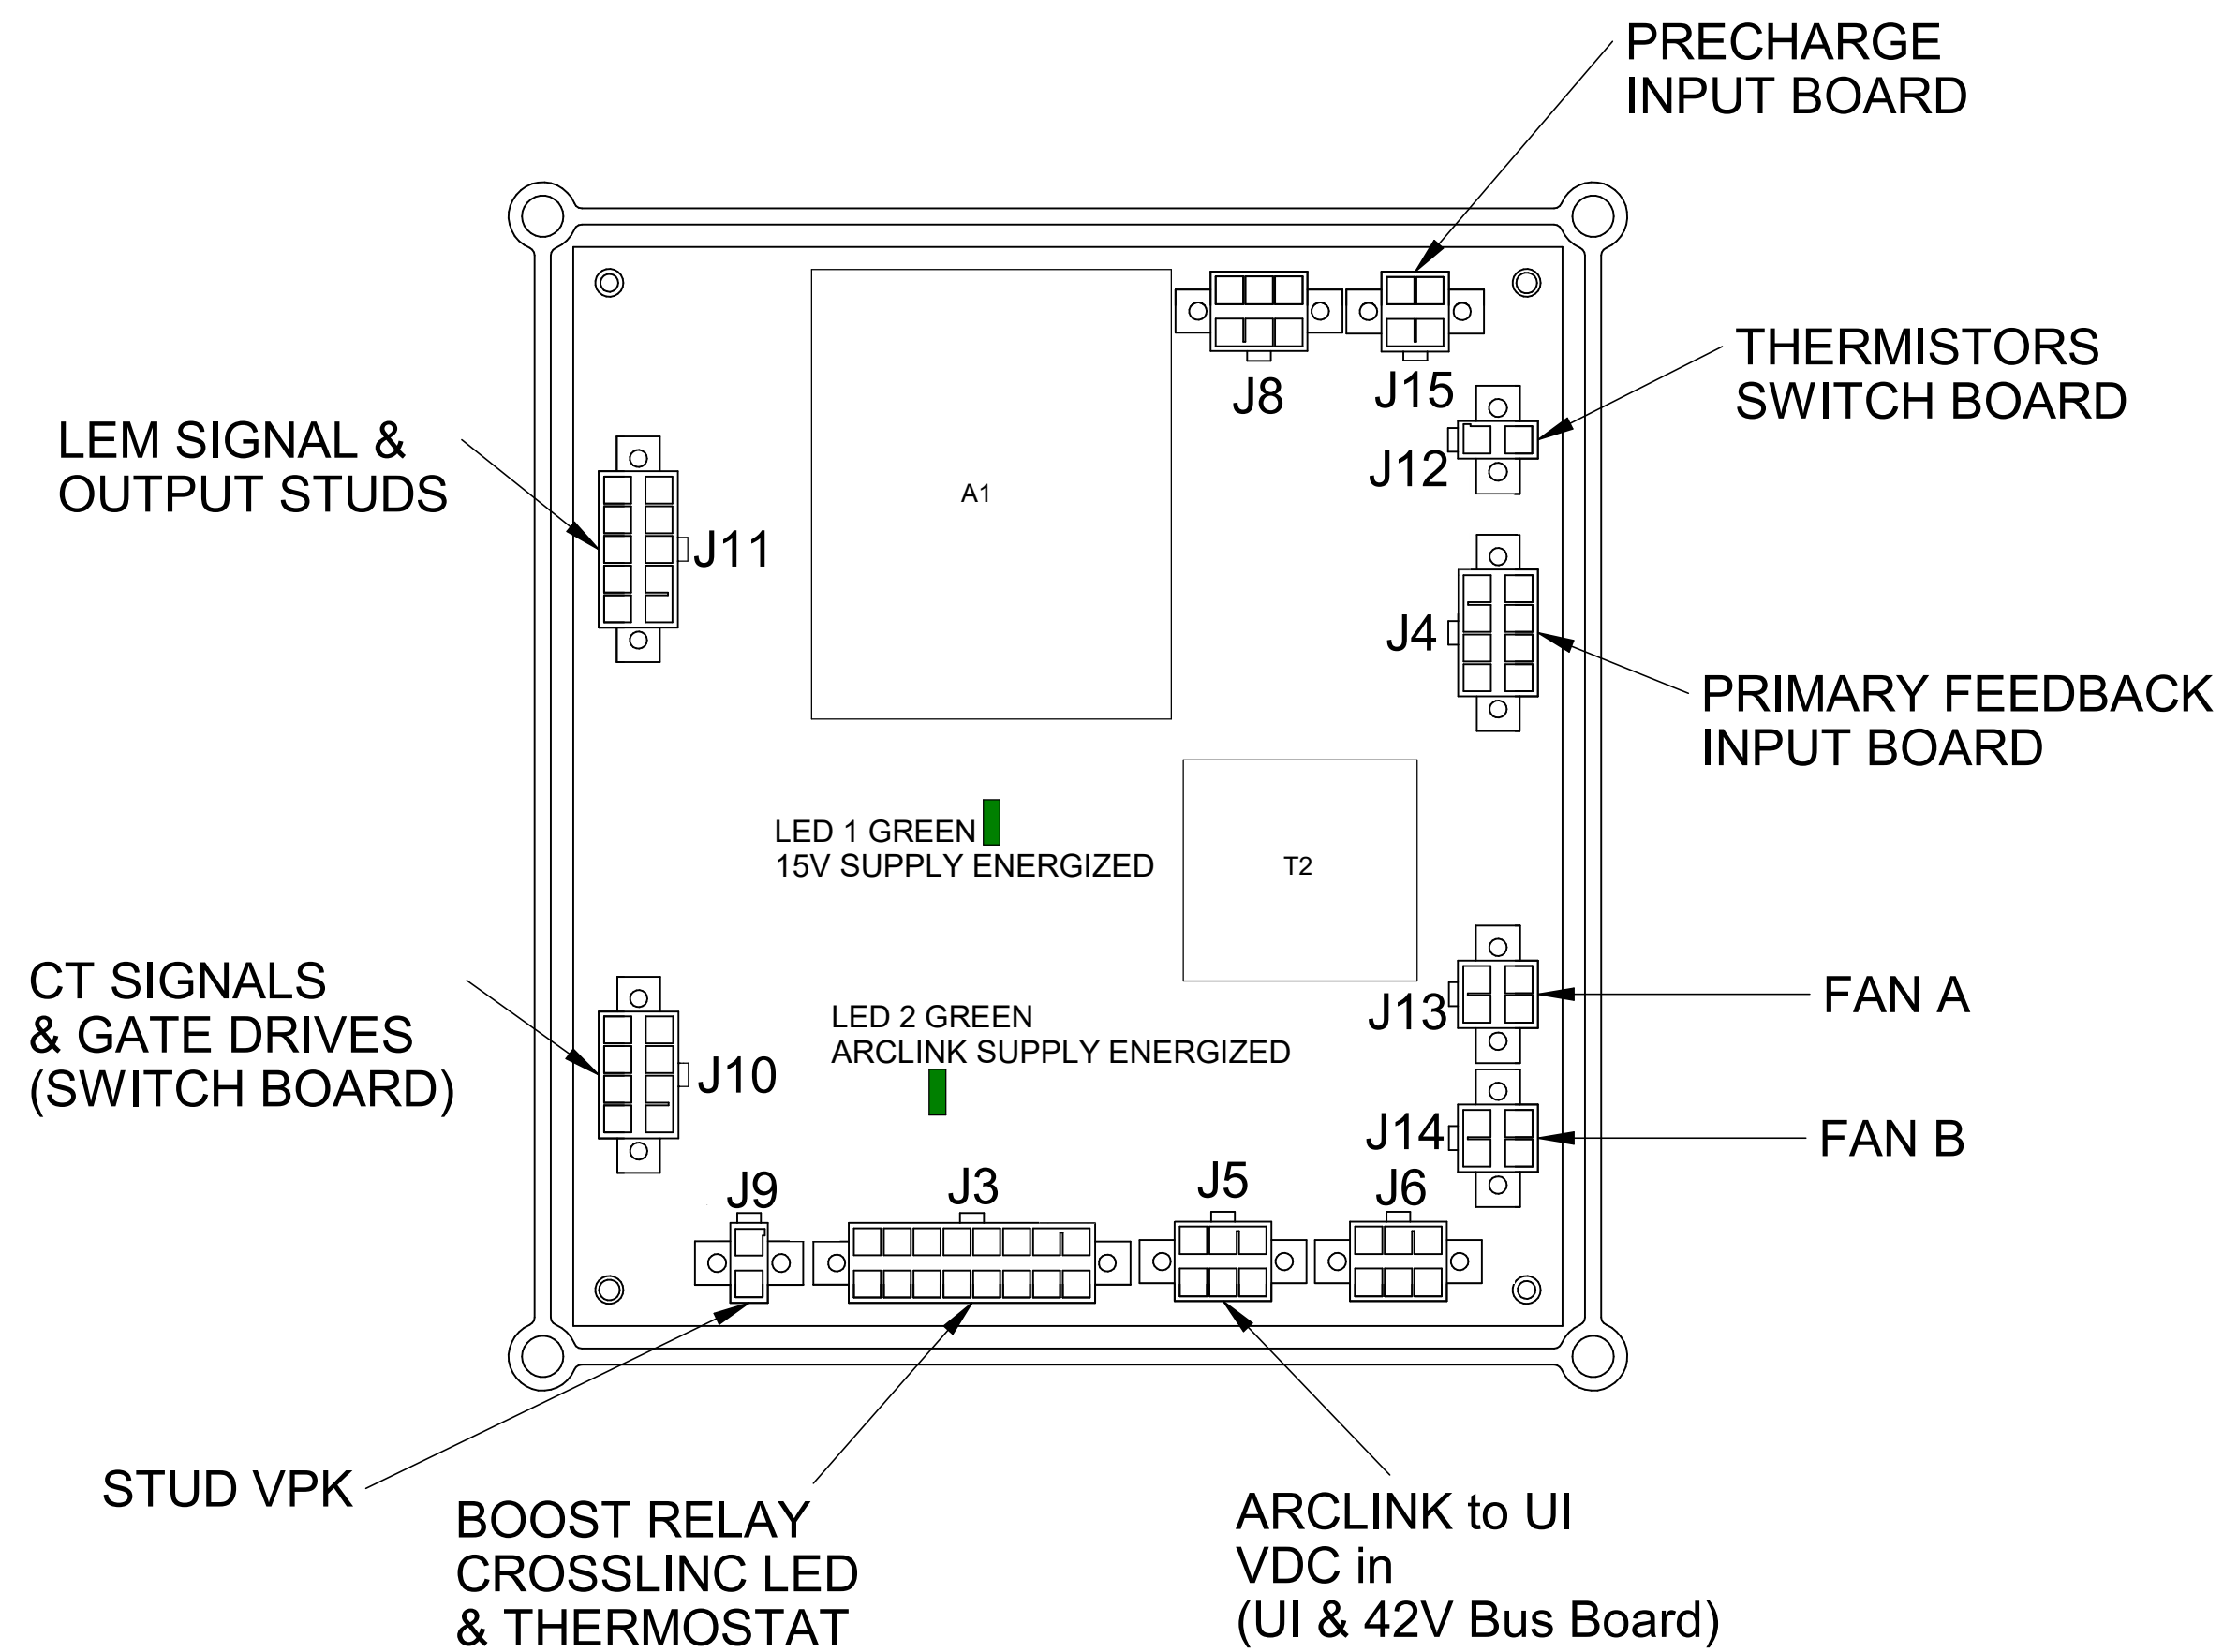


### BRAIN BOARD (A1)

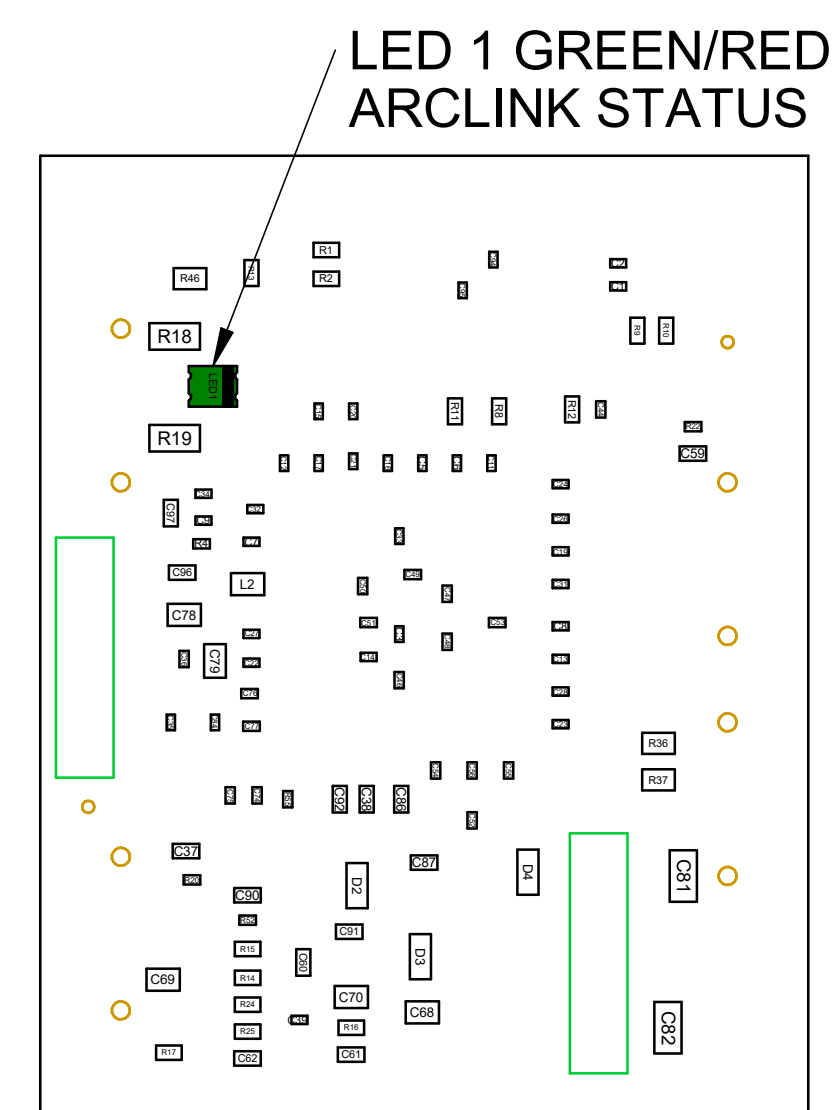


2:1


### BOOST SNUBBER BOARD

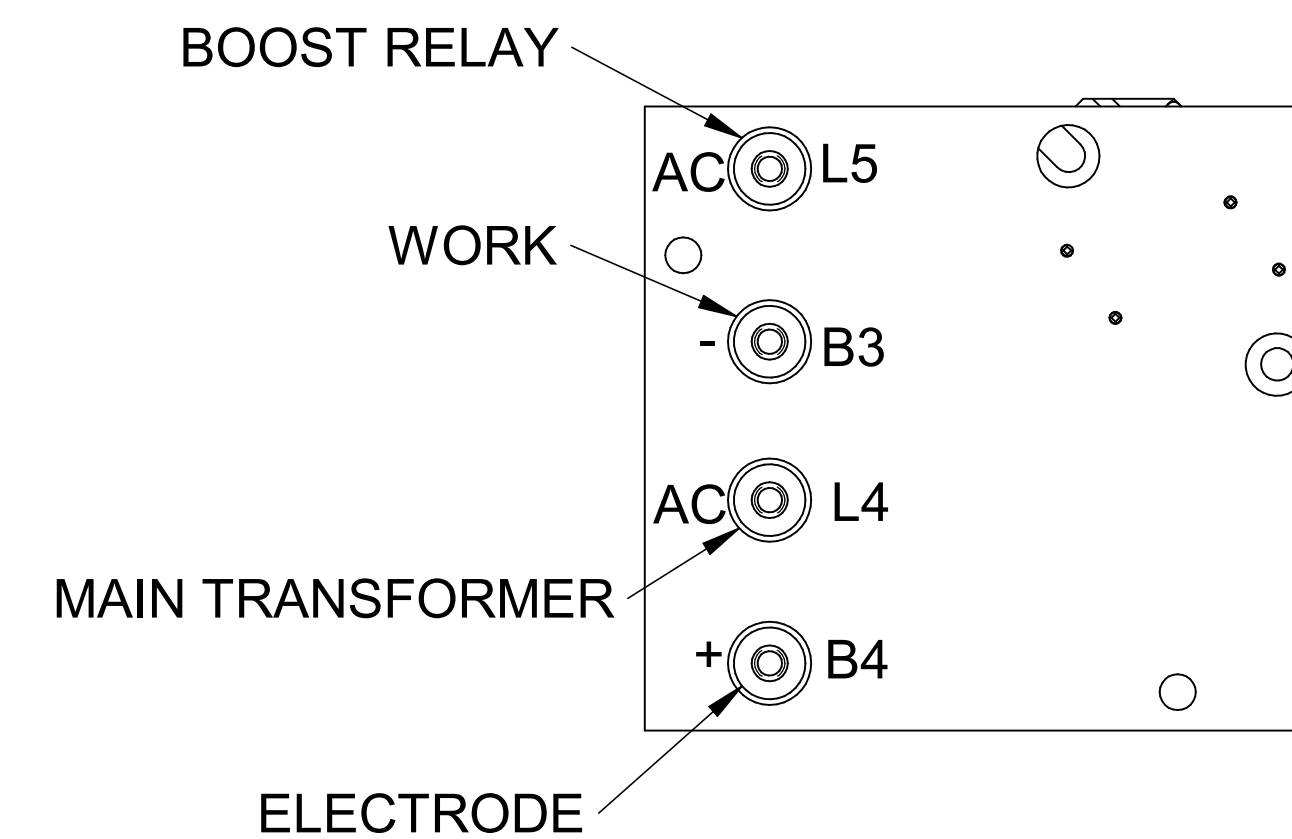


### 42V DC BUS BOARD

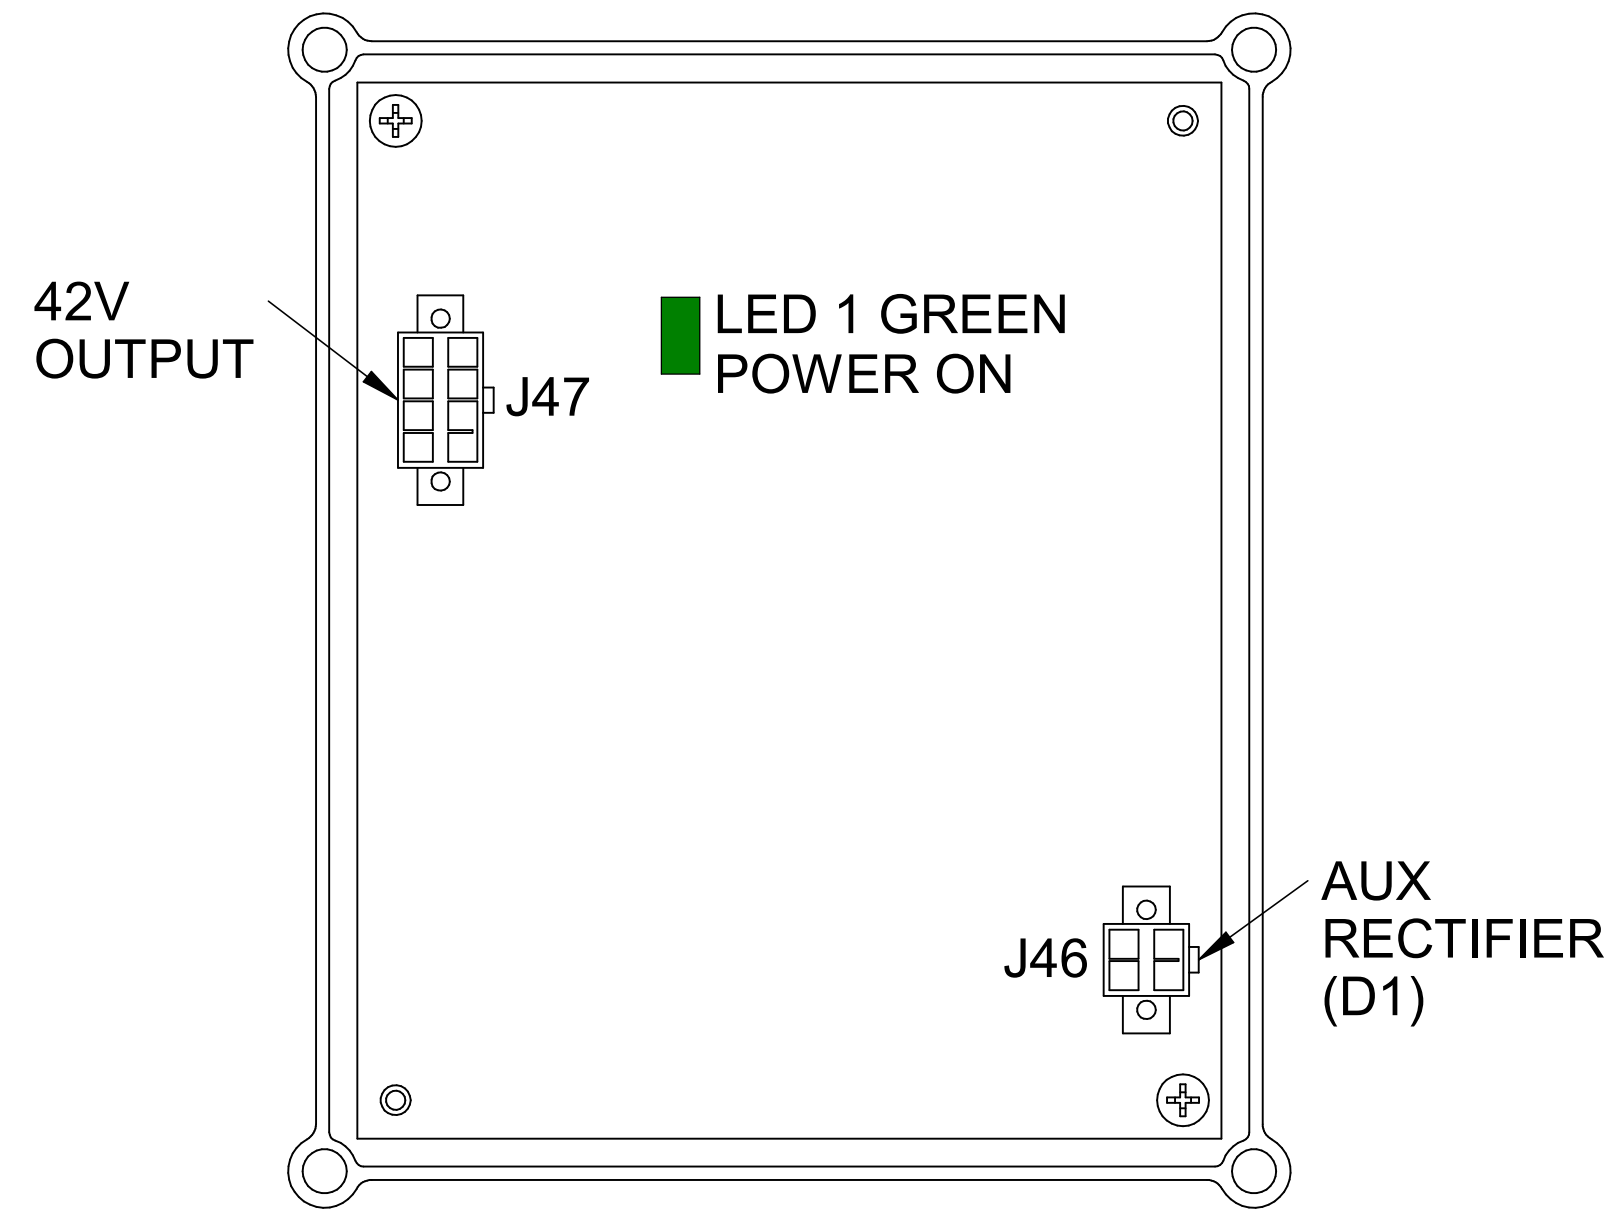

### USER INTERFACE BOARD (FRONT)

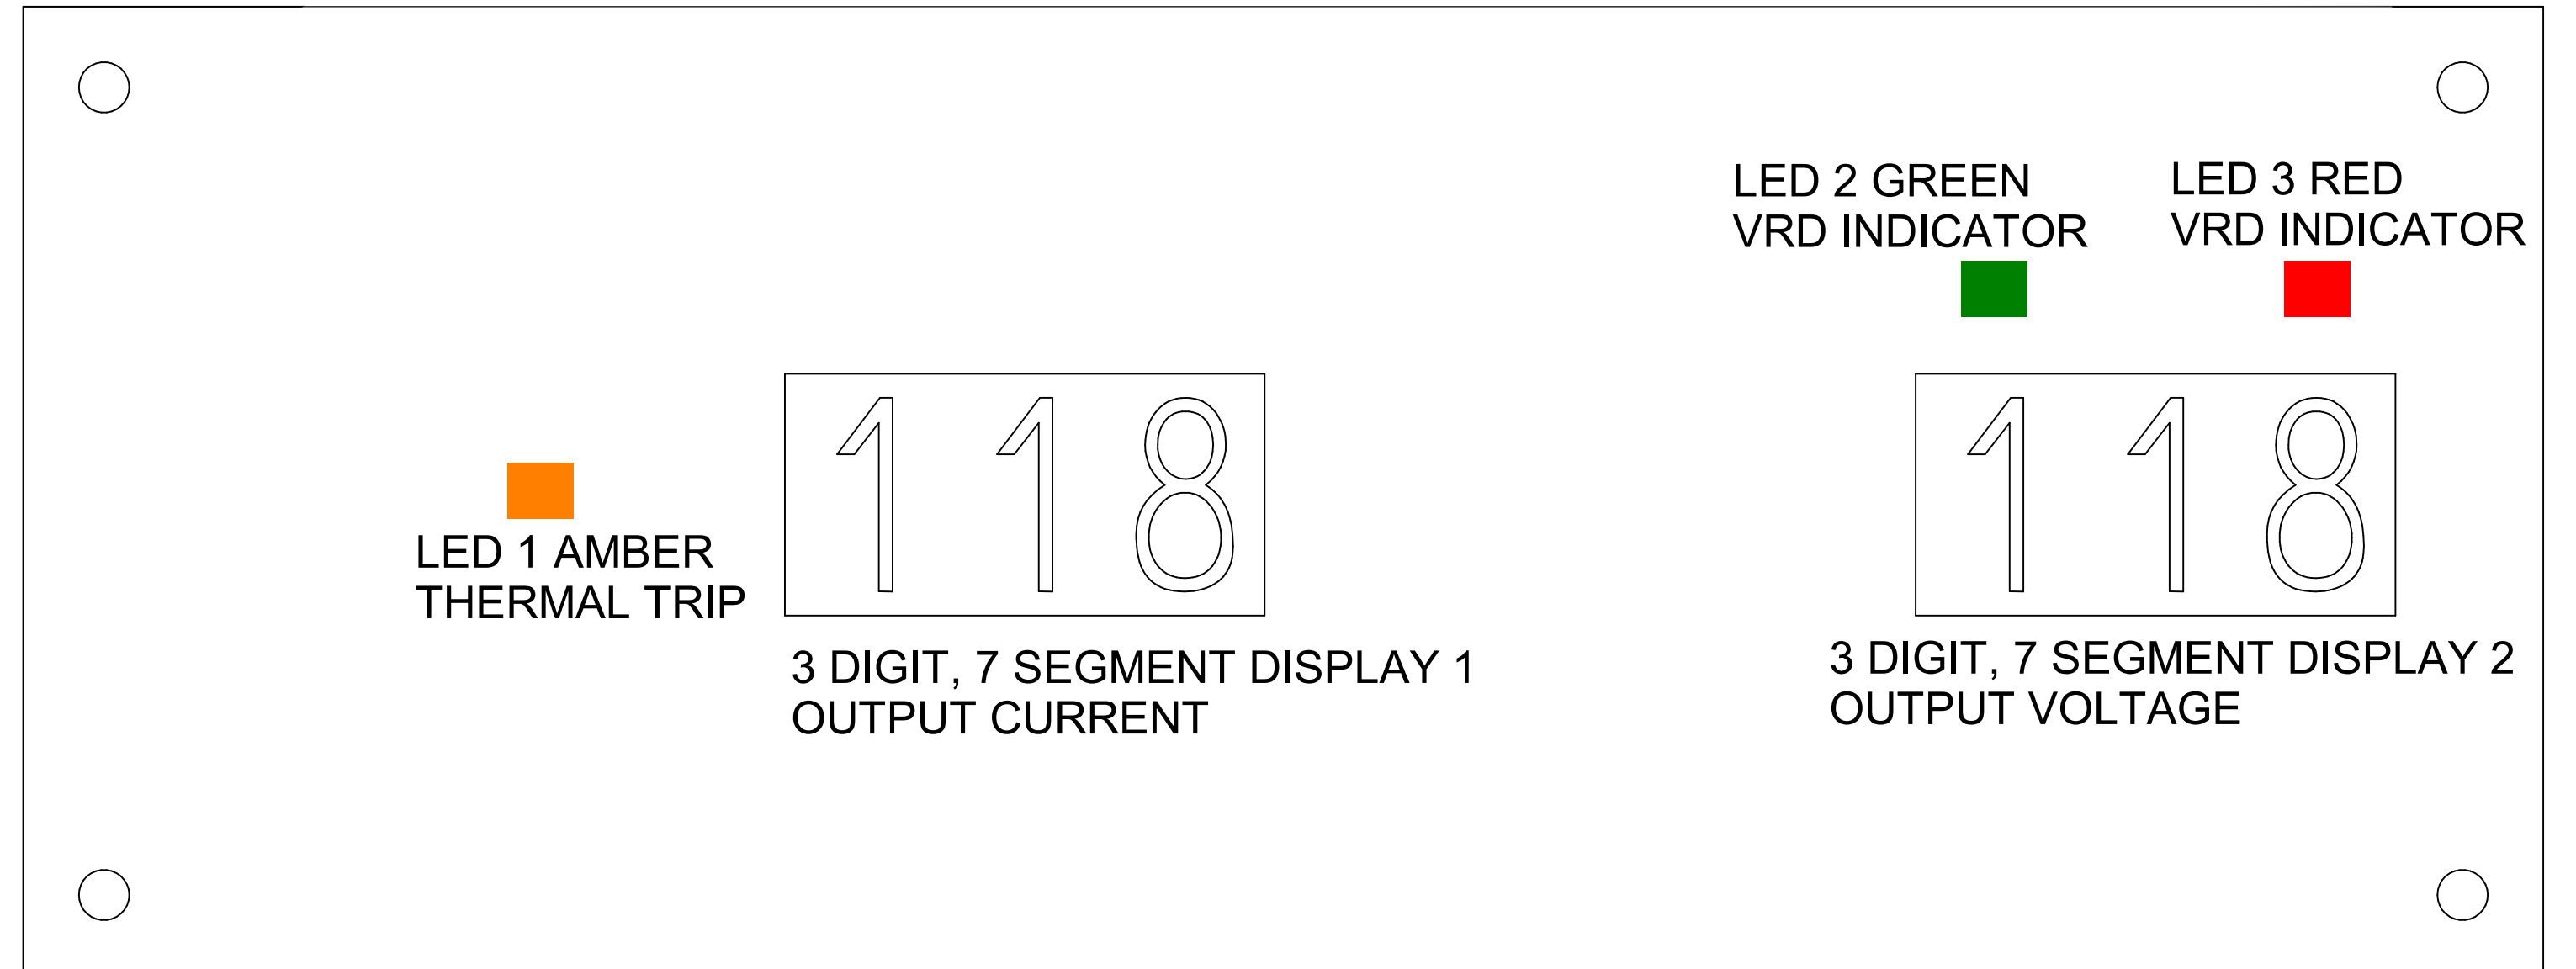

### USER INTERFACE BOARD (BACK)

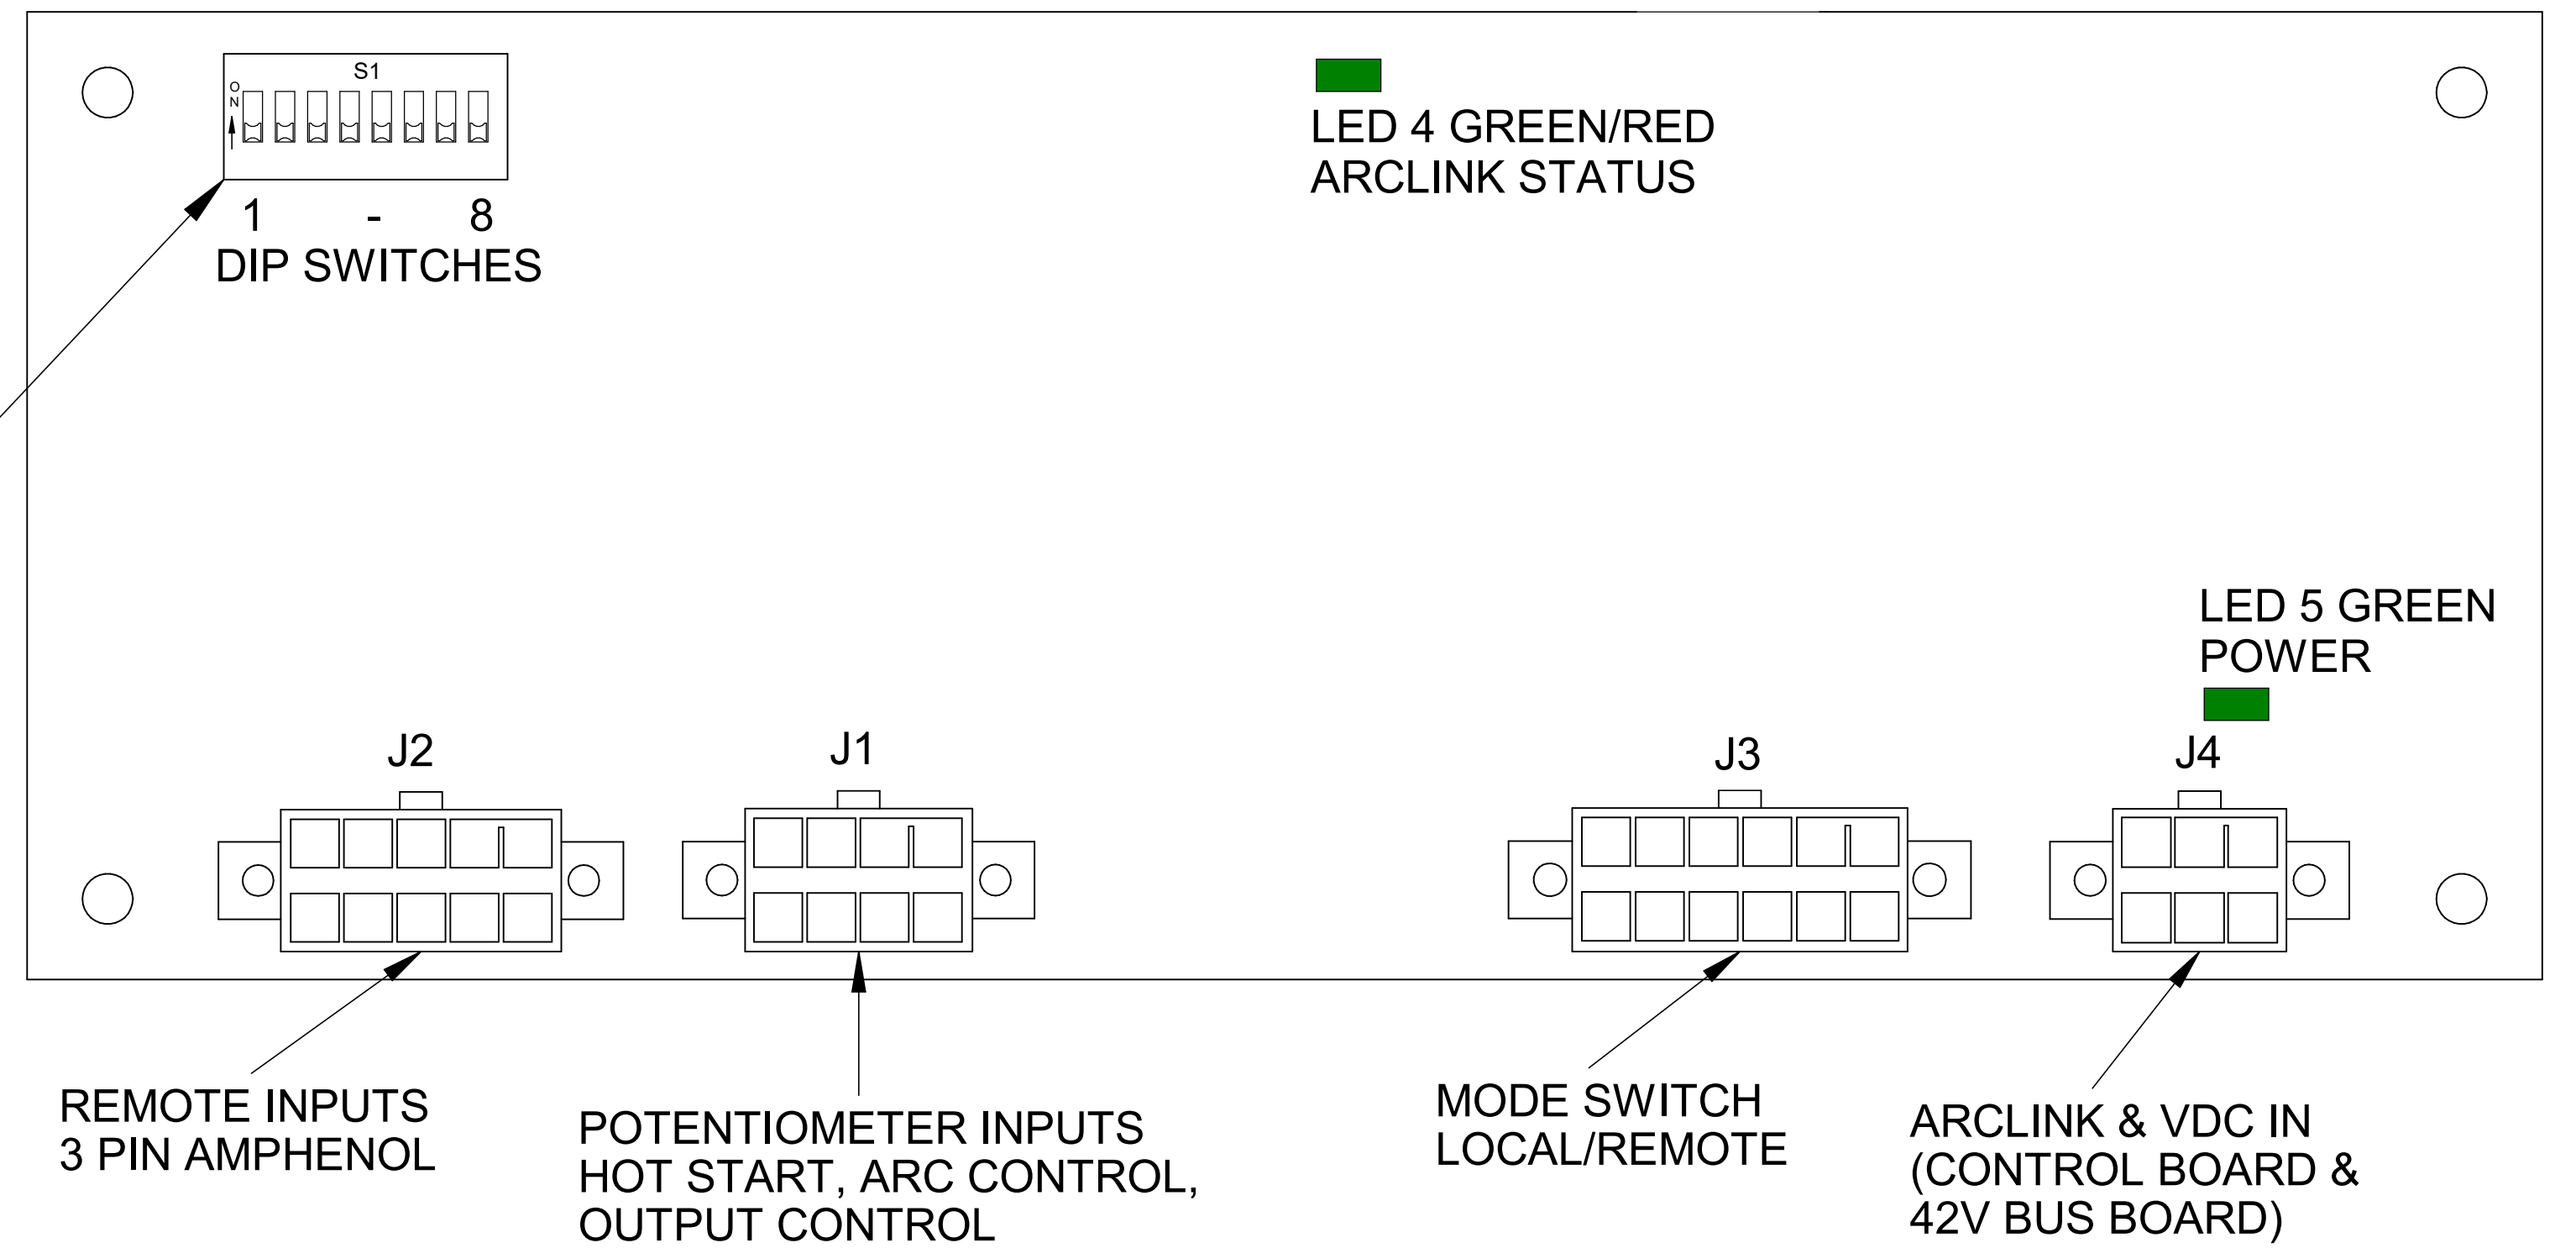

#### DIP SWITCH FUNCTIONS

SWITCH	FUNCTION	DEFAULT
1	CALIBRATION MODE	OFF
2	NOT USED	OFF
3	NOT USED	OFF
4	CC (MODE 200) & CV (MODE 201) TEST MODES	OFF
5	VRD	OFF
6	NOT USED	OFF
7	NOT USED	OFF
8	FRONT PANEL CHECK, SOFTWARE VERSION, & ERROR LOGS	OFF