


POWER WAVE S500 NNS WIRING DIAGRAM G9271-5 REV-A

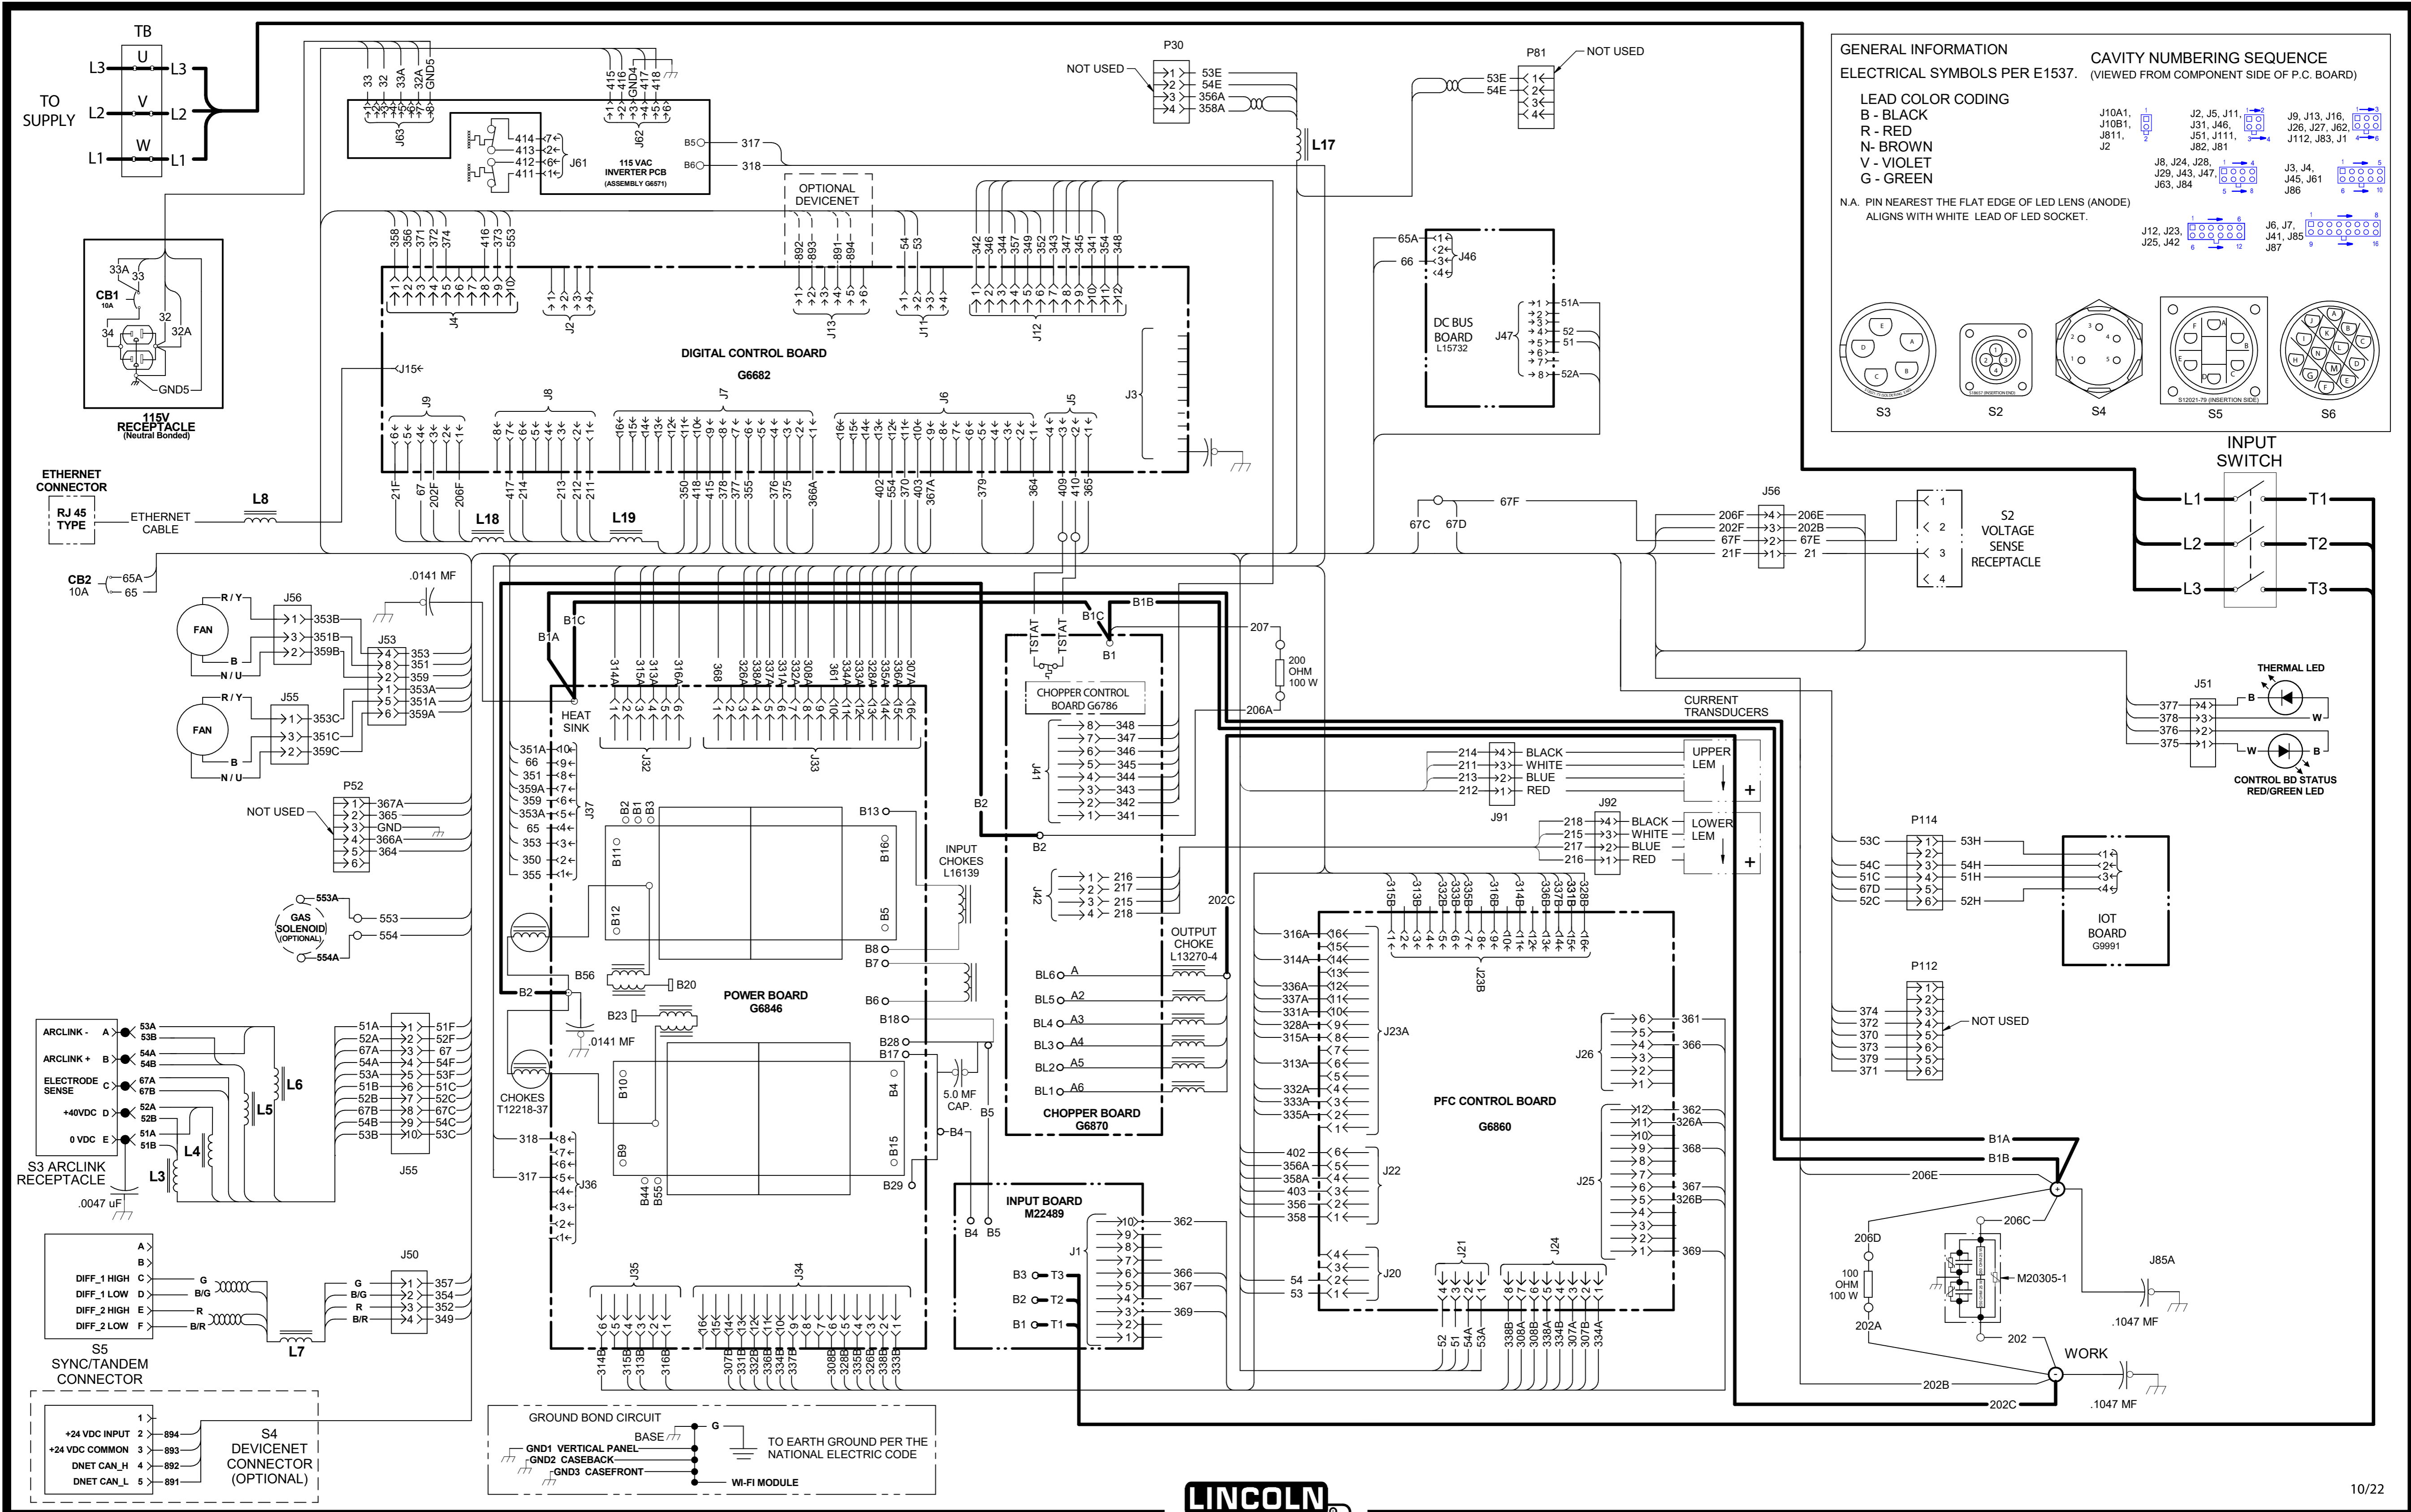

GENERAL INFORMATION
ELECTRICAL SYMBOLS PER E1537.

LEAD COLOR CODING
B - BLACK
R - RED
N - BROWN
V - VIOLET
G - GREEN

N.A. PIN NEAREST THE FLAT EDGE OF LED LENS (ANODE) ALIGNS WITH WHITE LEAD OF LED SOCKET.

CAVITY NUMBERING SEQUENCE
(VIEWED FROM COMPONENT SIDE OF P.C. BOARD)

J10A1, J10B1, J811, J2	J2, J5, J11, J31, J46, J51, J111, J82, J81	J9, J13, J16, J26, J27, J62, J112, J83, J1
J8, J24, J28, J29, J43, J47, J63, J84	J3, J4, J45, J61, J86	
J12, J23, J25, J42	J6, J7, J41, J85, J87	