


POWER WAVE R500 WIRING DIAGRAM G7188-2 REV: E

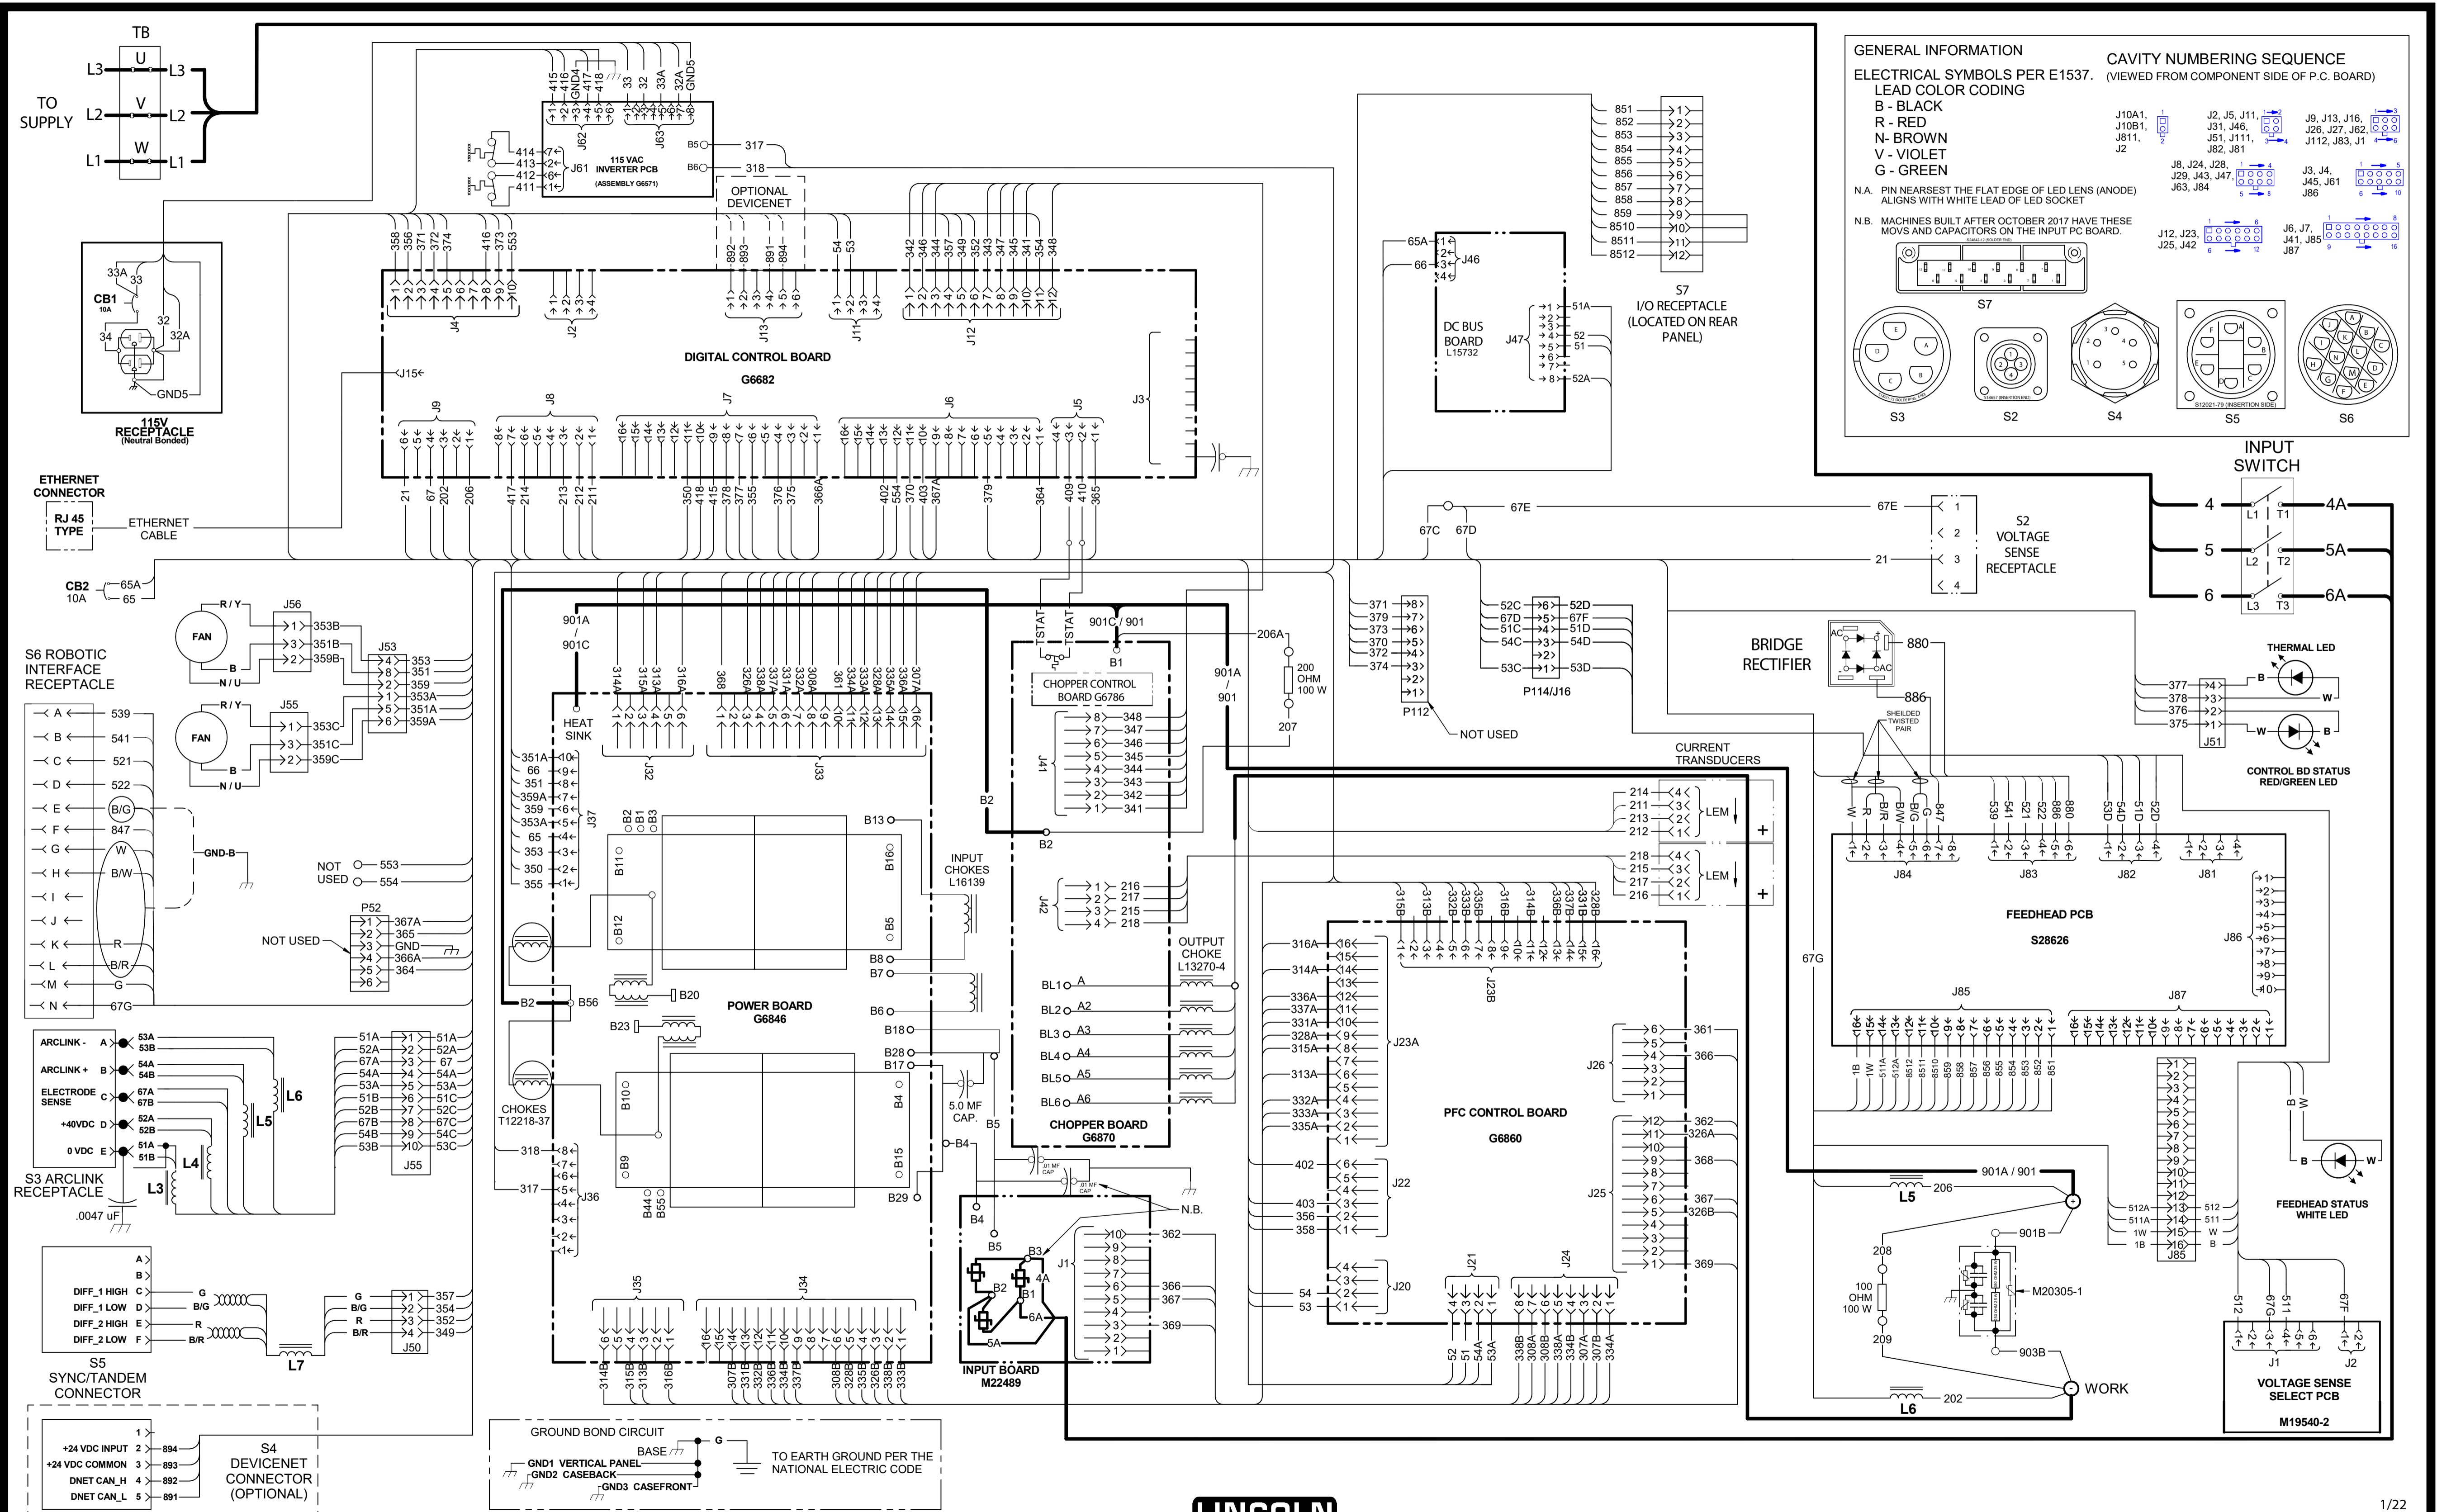

GENERAL INFORMATION

ELECTRICAL SYMBOLS PER E1537.
LEAD COLOR CODING
 B - BLACK
 R - RED
 N - BROWN
 V - VIOLET
 G - GREEN

N.A. PIN NEAREST THE FLAT EDGE OF LED LENS (ANODE)
 ALIGNS WITH WHITE LEAD OF LED SOCKET

N.B. MACHINES BUILT AFTER OCTOBER 2017 HAVE THESE MOVIS AND CAPACITORS ON THE INPUT PCB BOARD.

CAVITY NUMBERING SEQUENCE

(VIEWED FROM COMPONENT SIDE OF P.C. BOARD)

J10A1, J10B1, J81, J2	J2, J5, J11, J31, J46, J51, J111, J82, J81	J9, J13, J16, J26, J27, J62, J112, J83, J1
J8, J24, J28, J29, J43, J47, J63, J84	J3, J4, J45, J61, J86	J12, J23, J25, J42

Diagram showing LED socket orientations for S3, S2, S4, S5, and S6.

