


# POWER WAVE R500 WIRING DIAGRAM G7188-5 REV: D

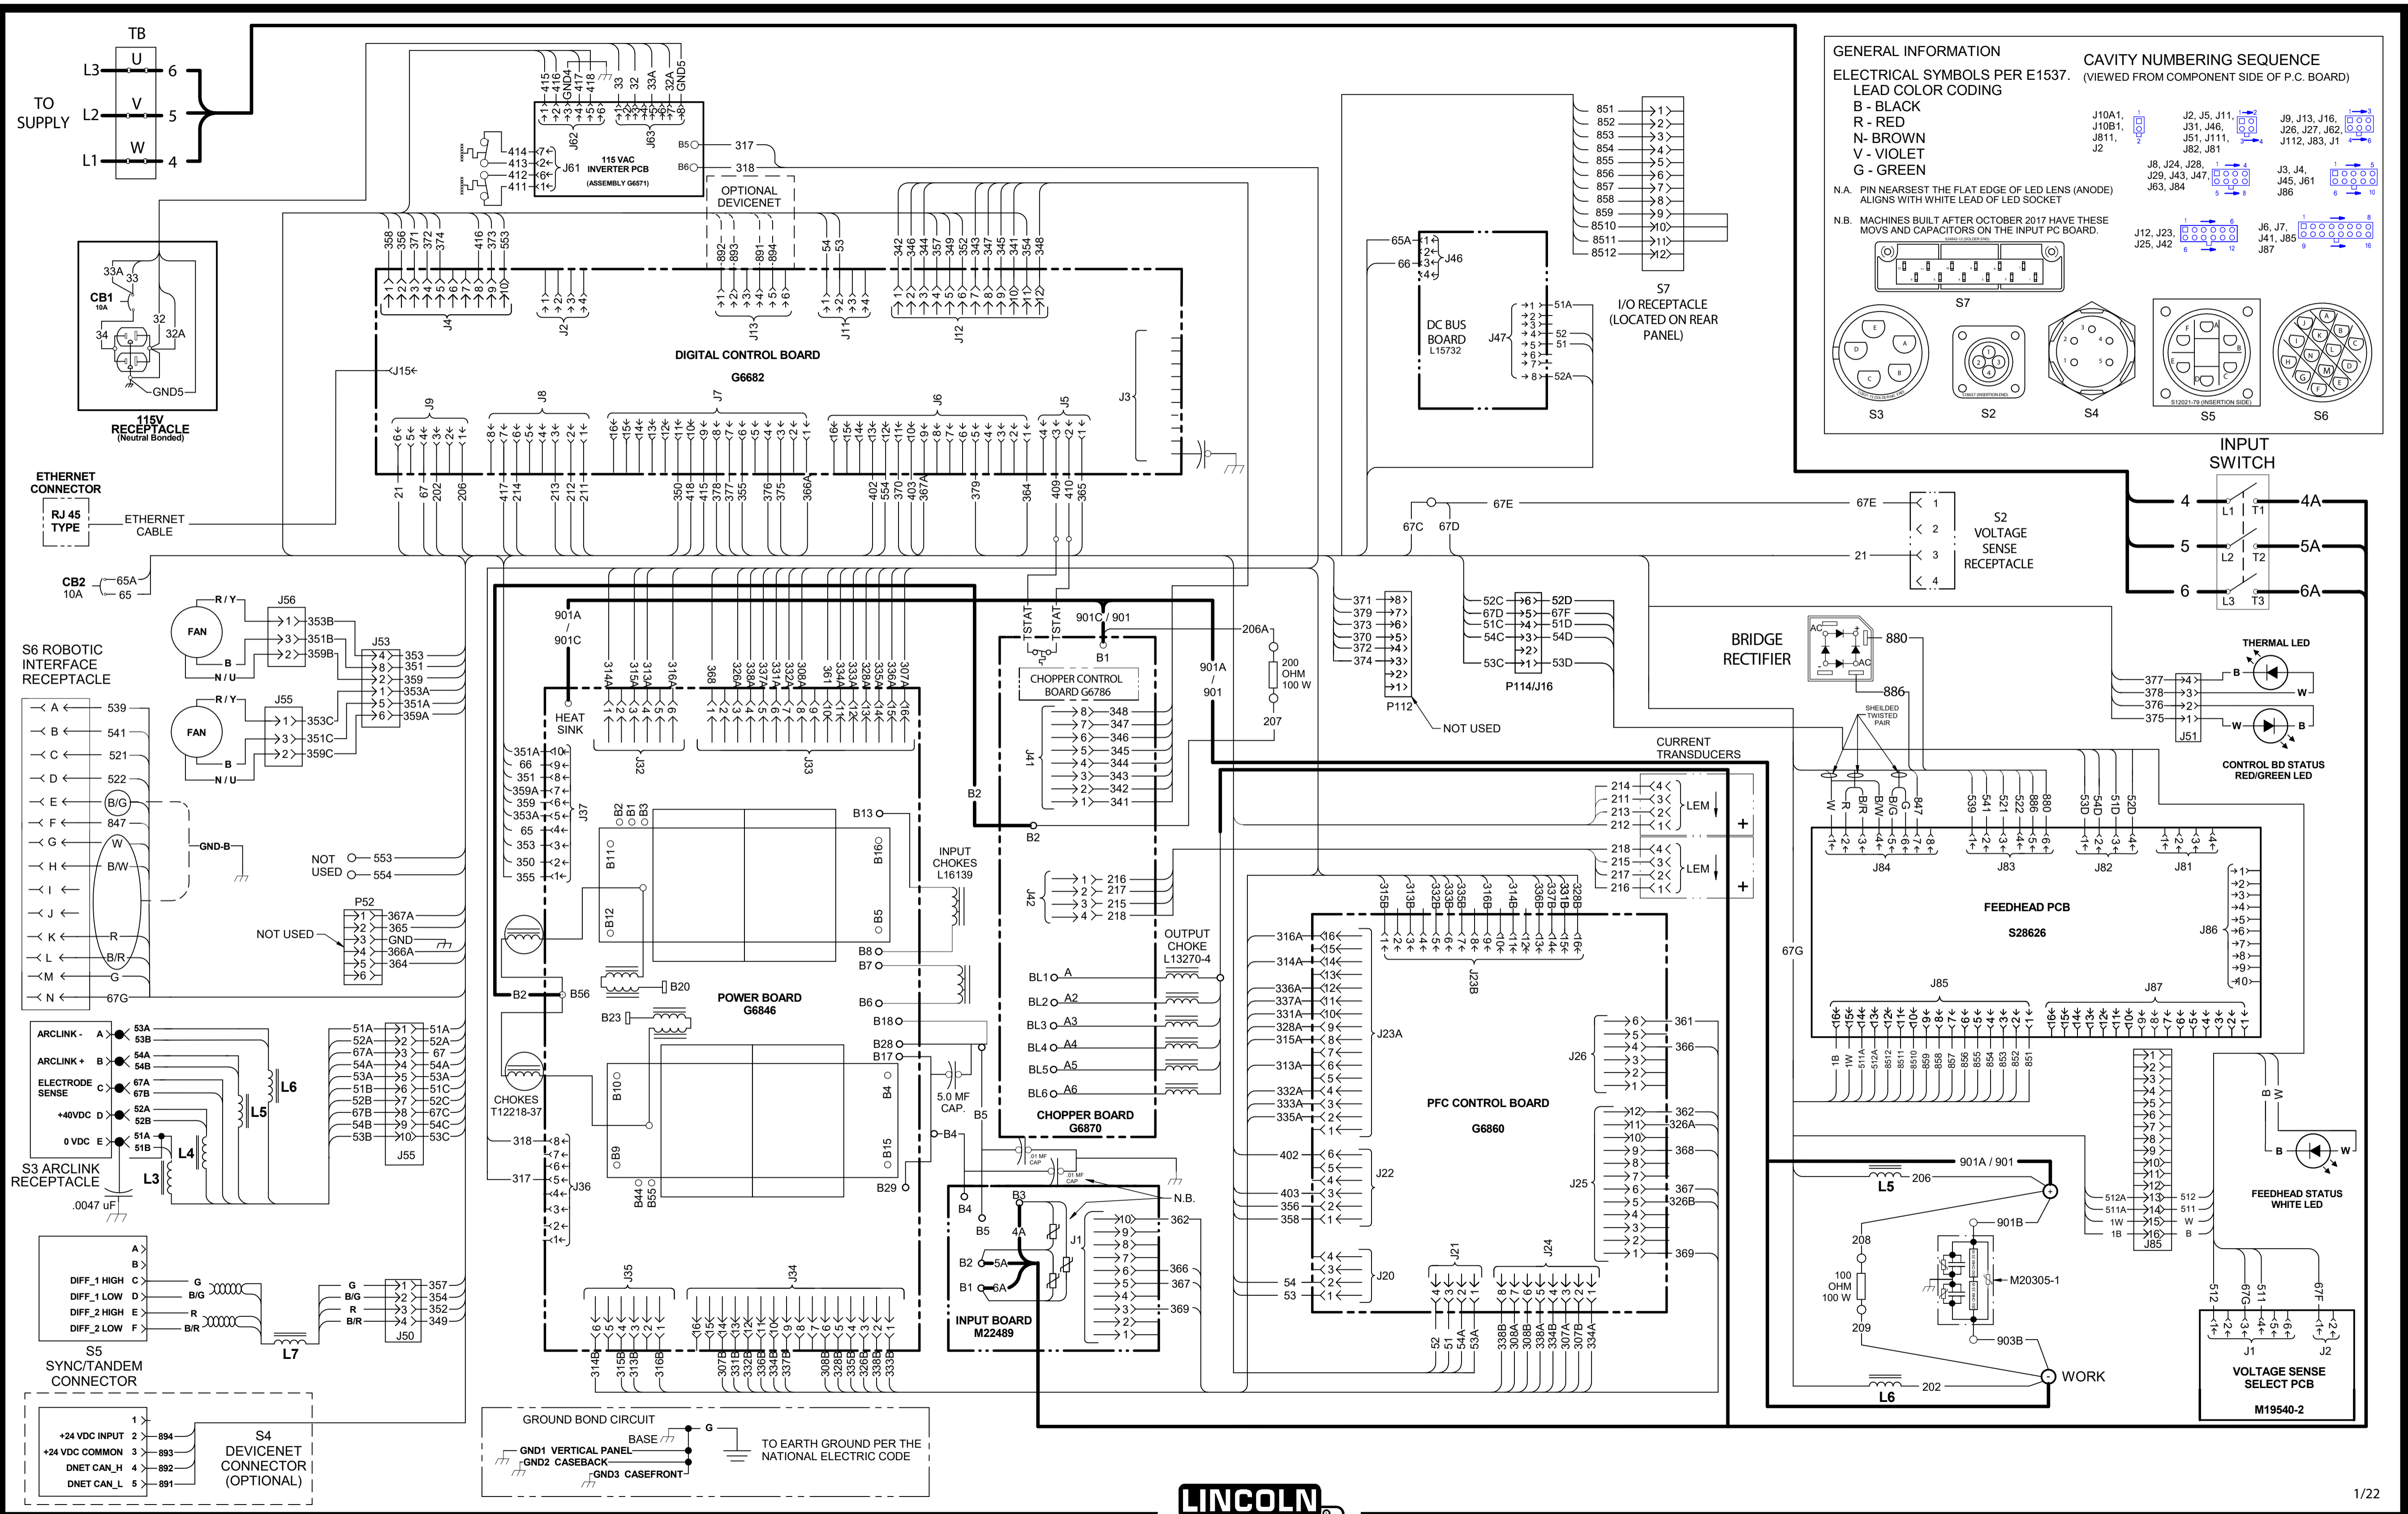

### GENERAL INFORMATION

ELECTRICAL SYMBOLS PER E1537.  
LEAD COLOR CODING  
B - BLACK  
R - RED  
N - BROWN  
V - VIOLET  
G - GREEN

### CAVITY NUMBERING SEQUENCE

(VIEWED FROM COMPONENT SIDE OF P.C. BOARD)

J10A1, J10B1, J811, J81	J2, J5, J11, J31, J46, J51, J111, J82, J81	J9, J13, J16, J26, J27, J62, J112, J83, J1
J8, J24, J28, J29, J43, J47, J63, J84	J3, J4, J45, J61, J86	J12, J23, J25, J42
J6, J7, J41, J85, J87		

N.A. PIN NEAREST THE FLAT EDGE OF LED LENS (ANODE) ALIGNS WITH WHITE LEAD OF LED SOCKET

N.B. MACHINES BUILT AFTER OCTOBER 2017 HAVE THESE MOVES AND CAPACITORS ON THE INPUT PC BOARD.

