


POWER WAVE S350 WIRING DIAGRAM G6536-7 REV: A.01

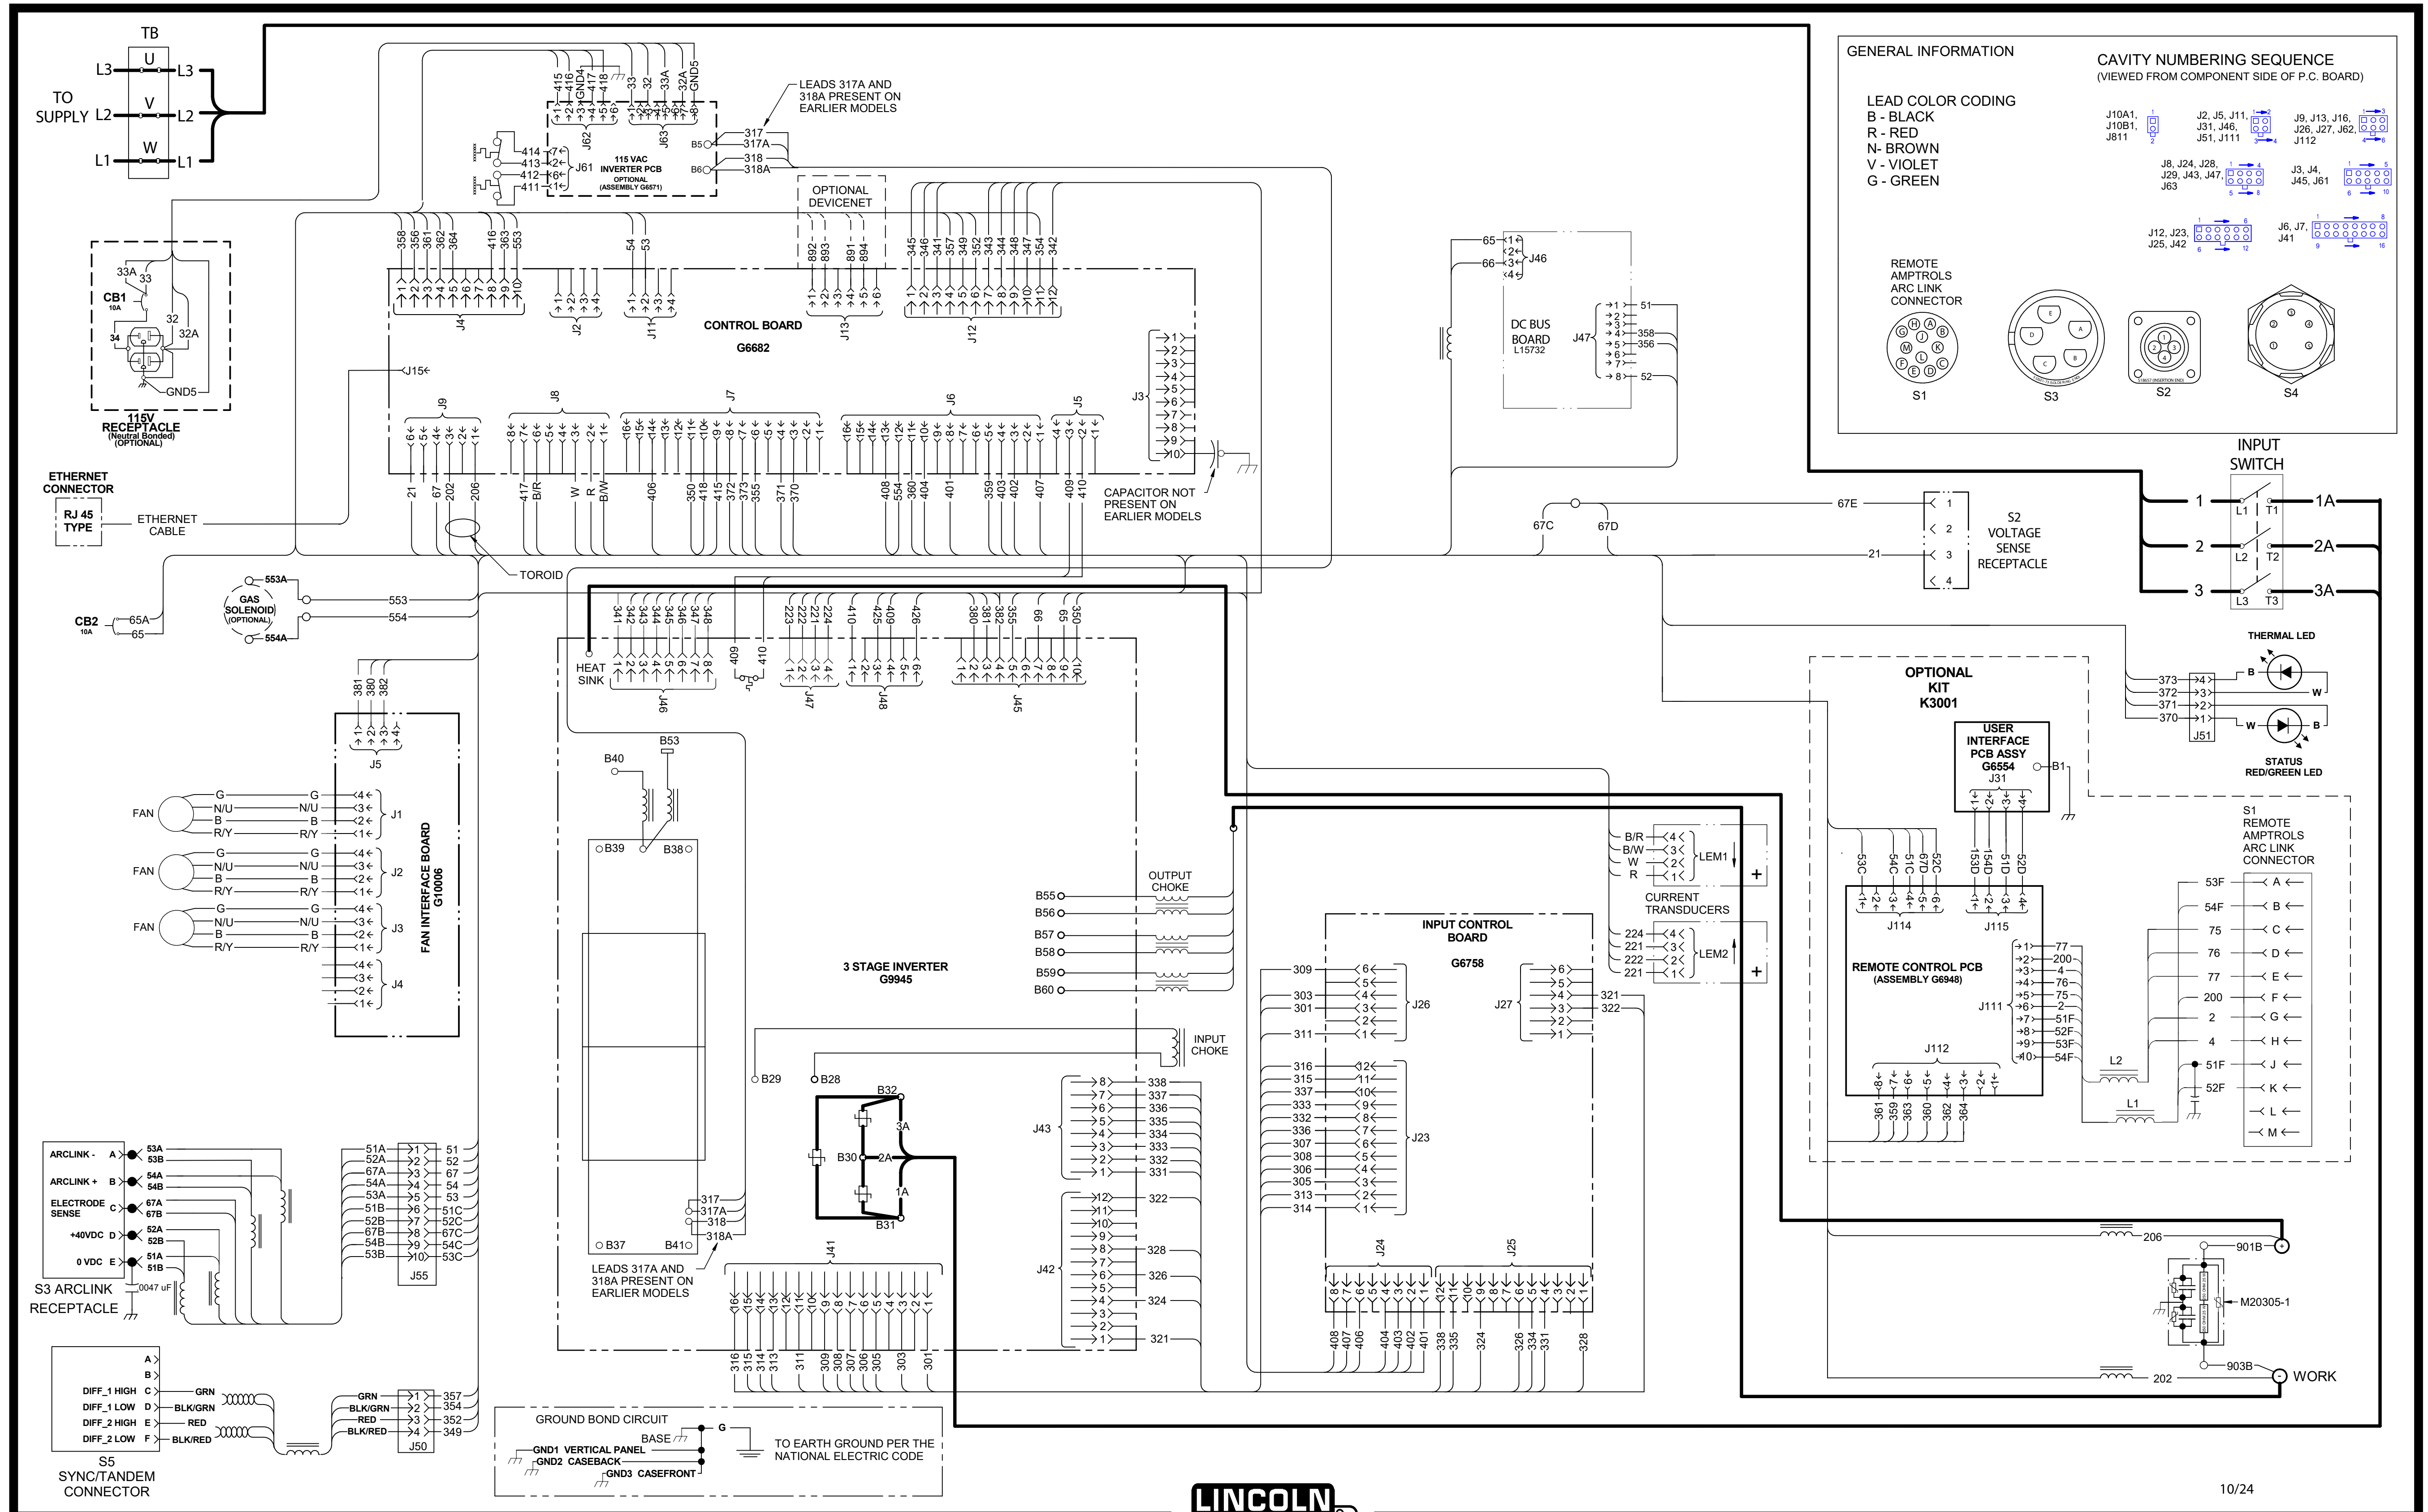

GENERAL INFORMATION

LEAD COLOR CODING
 B - BLACK
 R - RED
 N - BROWN
 V - VIOLET
 G - GREEN

CAVITY NUMBERING SEQUENCE

(VIEWED FROM COMPONENT SIDE OF P.C. BOARD)

J10A1, J10B1, J811	J2, J5, J11, J31, J46, J51, J111	J9, J13, J16, J26, J27, J62, J112
J8, J24, J28, J29, J43, J47, J63	J3, J4, J45, J61	J12, J23, J25, J42
J6, J7, J41		

REMOTE AMPTRONS ARC LINK CONNECTOR

S1, S3, S2, S4

