


AC DC 1000 WIRING DIAGRAM G6541-1 REV: A

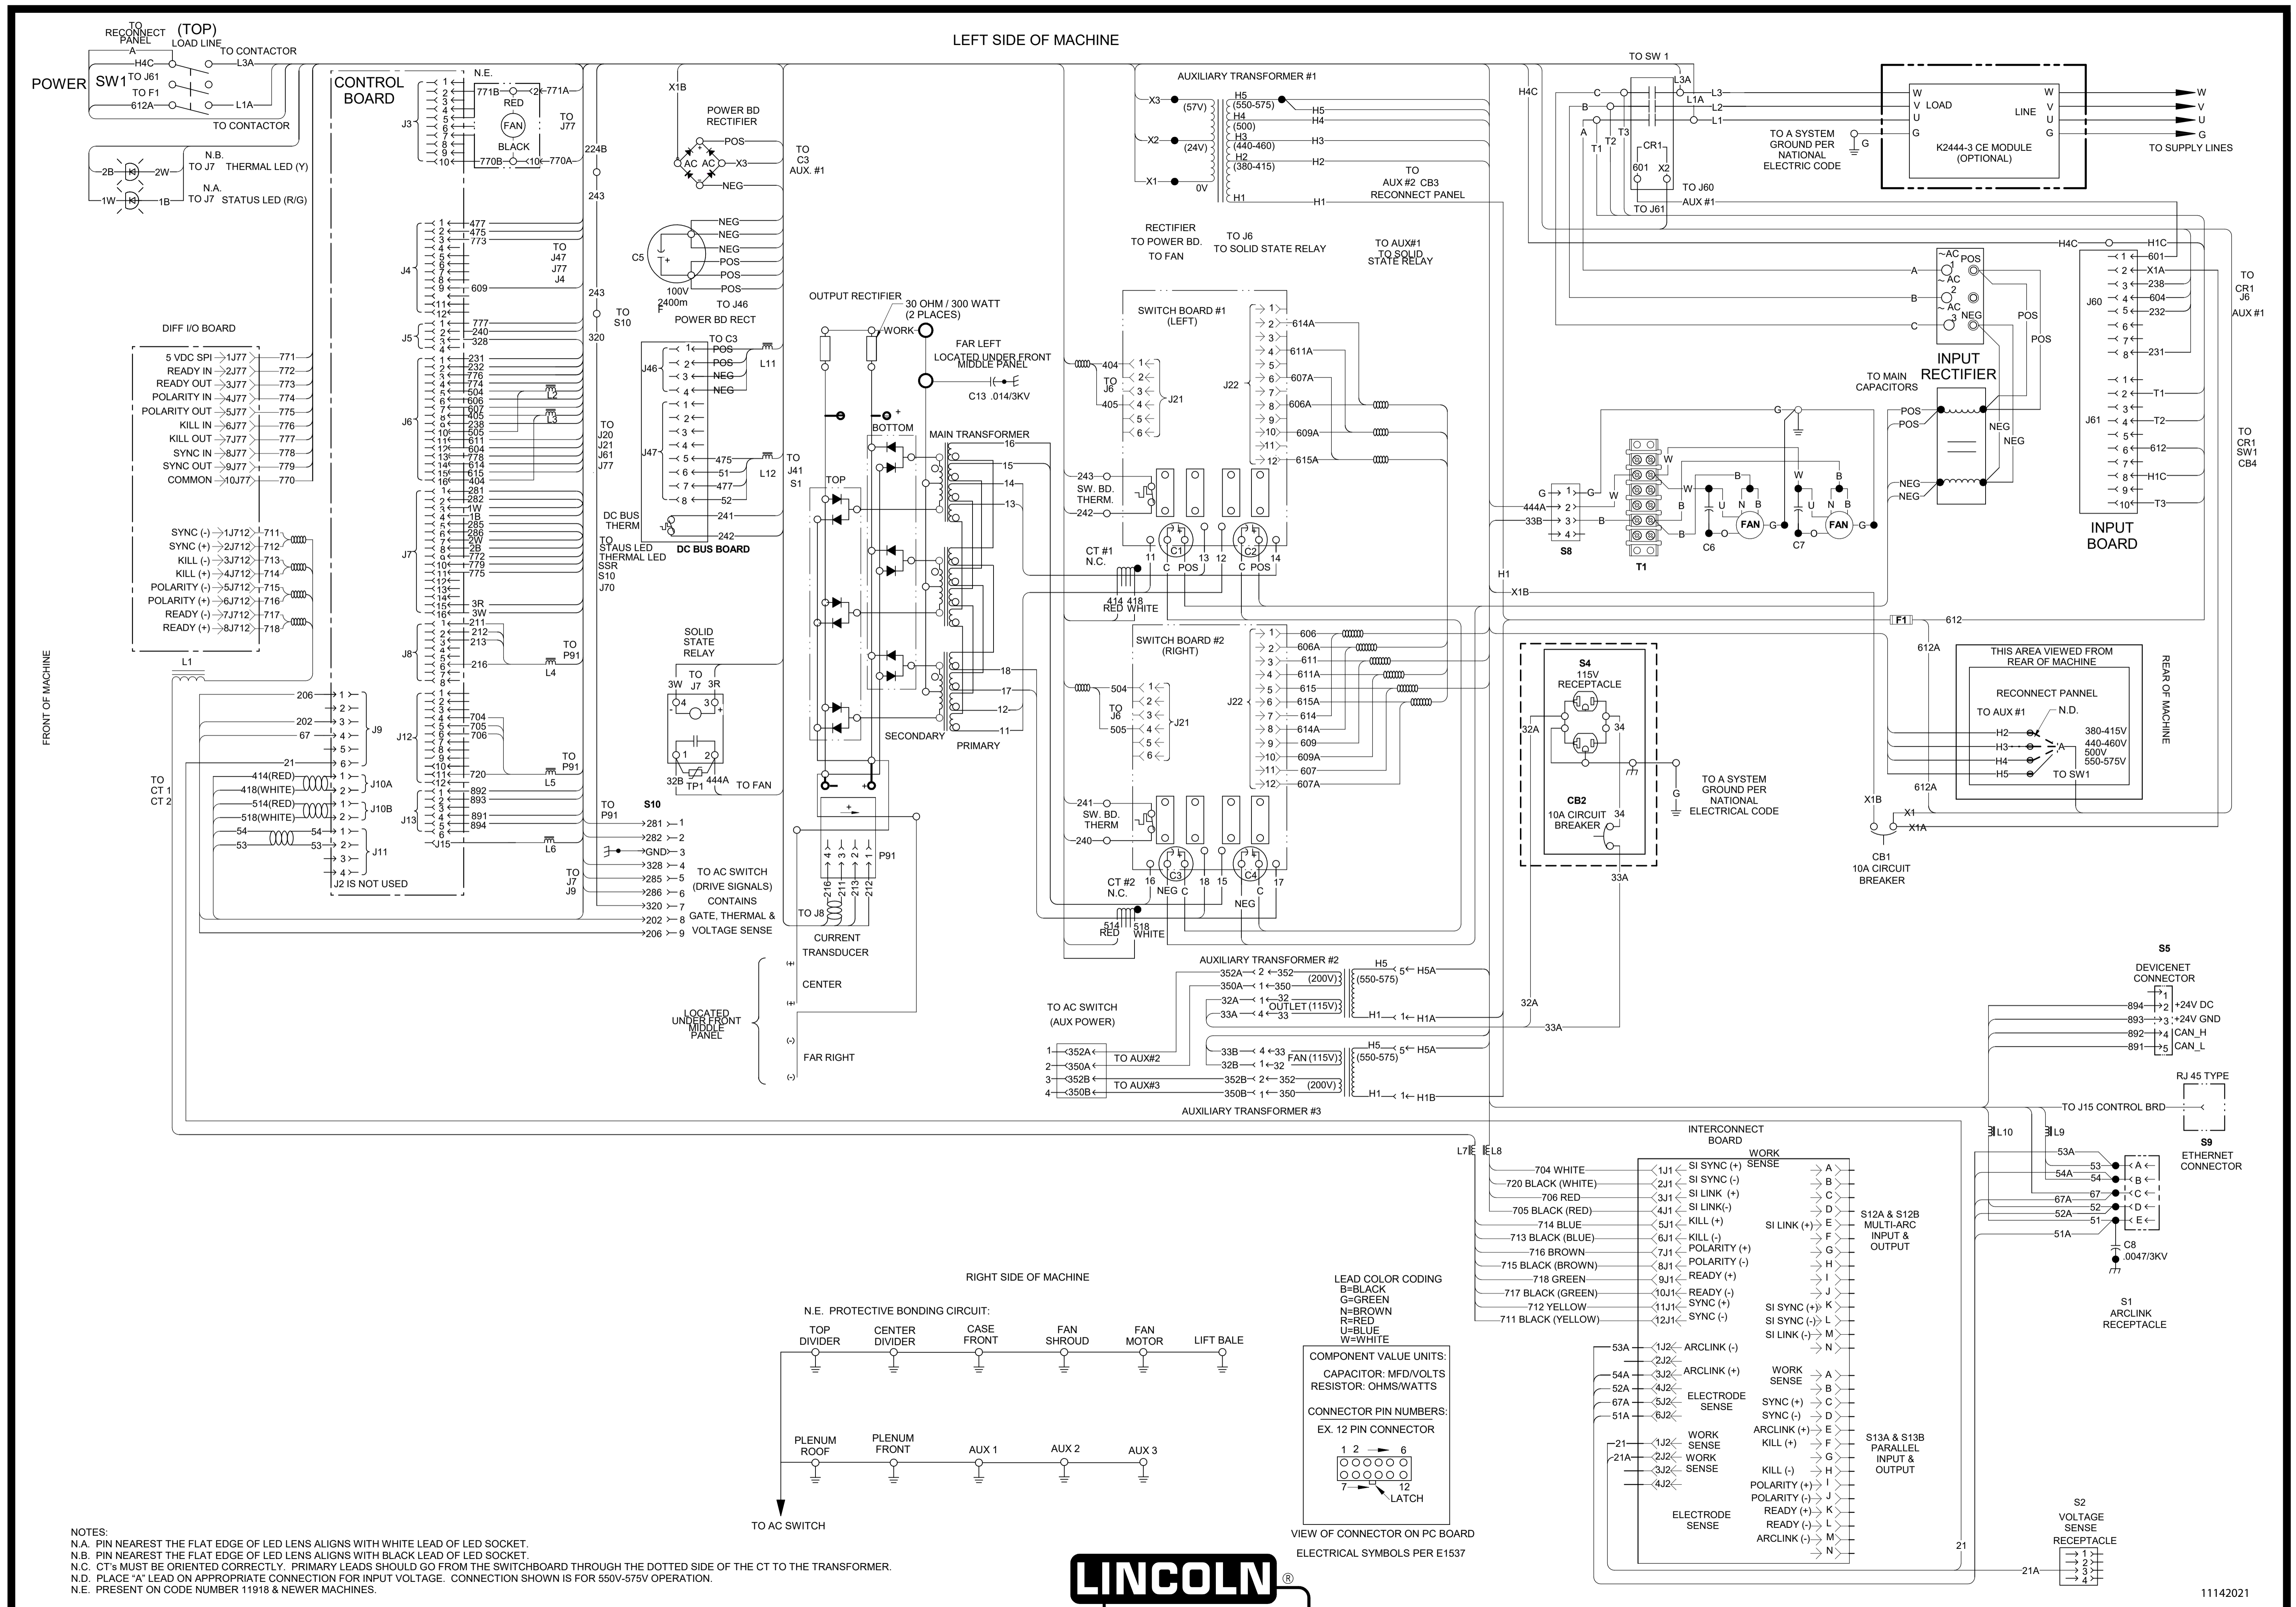

NOTES:
 N.A. PIN NEAREST THE FLAT EDGE OF LED LENS ALIGNS WITH WHITE LEAD OF LED SOCKET.
 N.B. PIN NEAREST THE FLAT EDGE OF LED LENS ALIGNS WITH BLACK LEAD OF LED SOCKET.
 N.C. CT'S MUST BE ORIENTED CORRECTLY. PRIMARY LEADS SHOULD GO FROM THE SWITCHBOARD THROUGH THE DOTTED SIDE OF THE CT TO THE TRANSFORMER.
 N.D. PLACE 'A' LEAD ON APPROPRIATE CONNECTION FOR INPUT VOLTAGE. CONNECTION SHOWN IS FOR 550V-575V OPERATION.
 N.E. PRESENT ON CODE NUMBER 11918 & NEWER MACHINES.



CLEVELAND, OHIO, U.S.A.