
故障排除指导 Troubleshooting Guide

ROVER 小车/RCH-1 控制箱 - 0414 报警
ROVER TRACTOR/RCH-1 CONTROL BOX - ERROR 0414

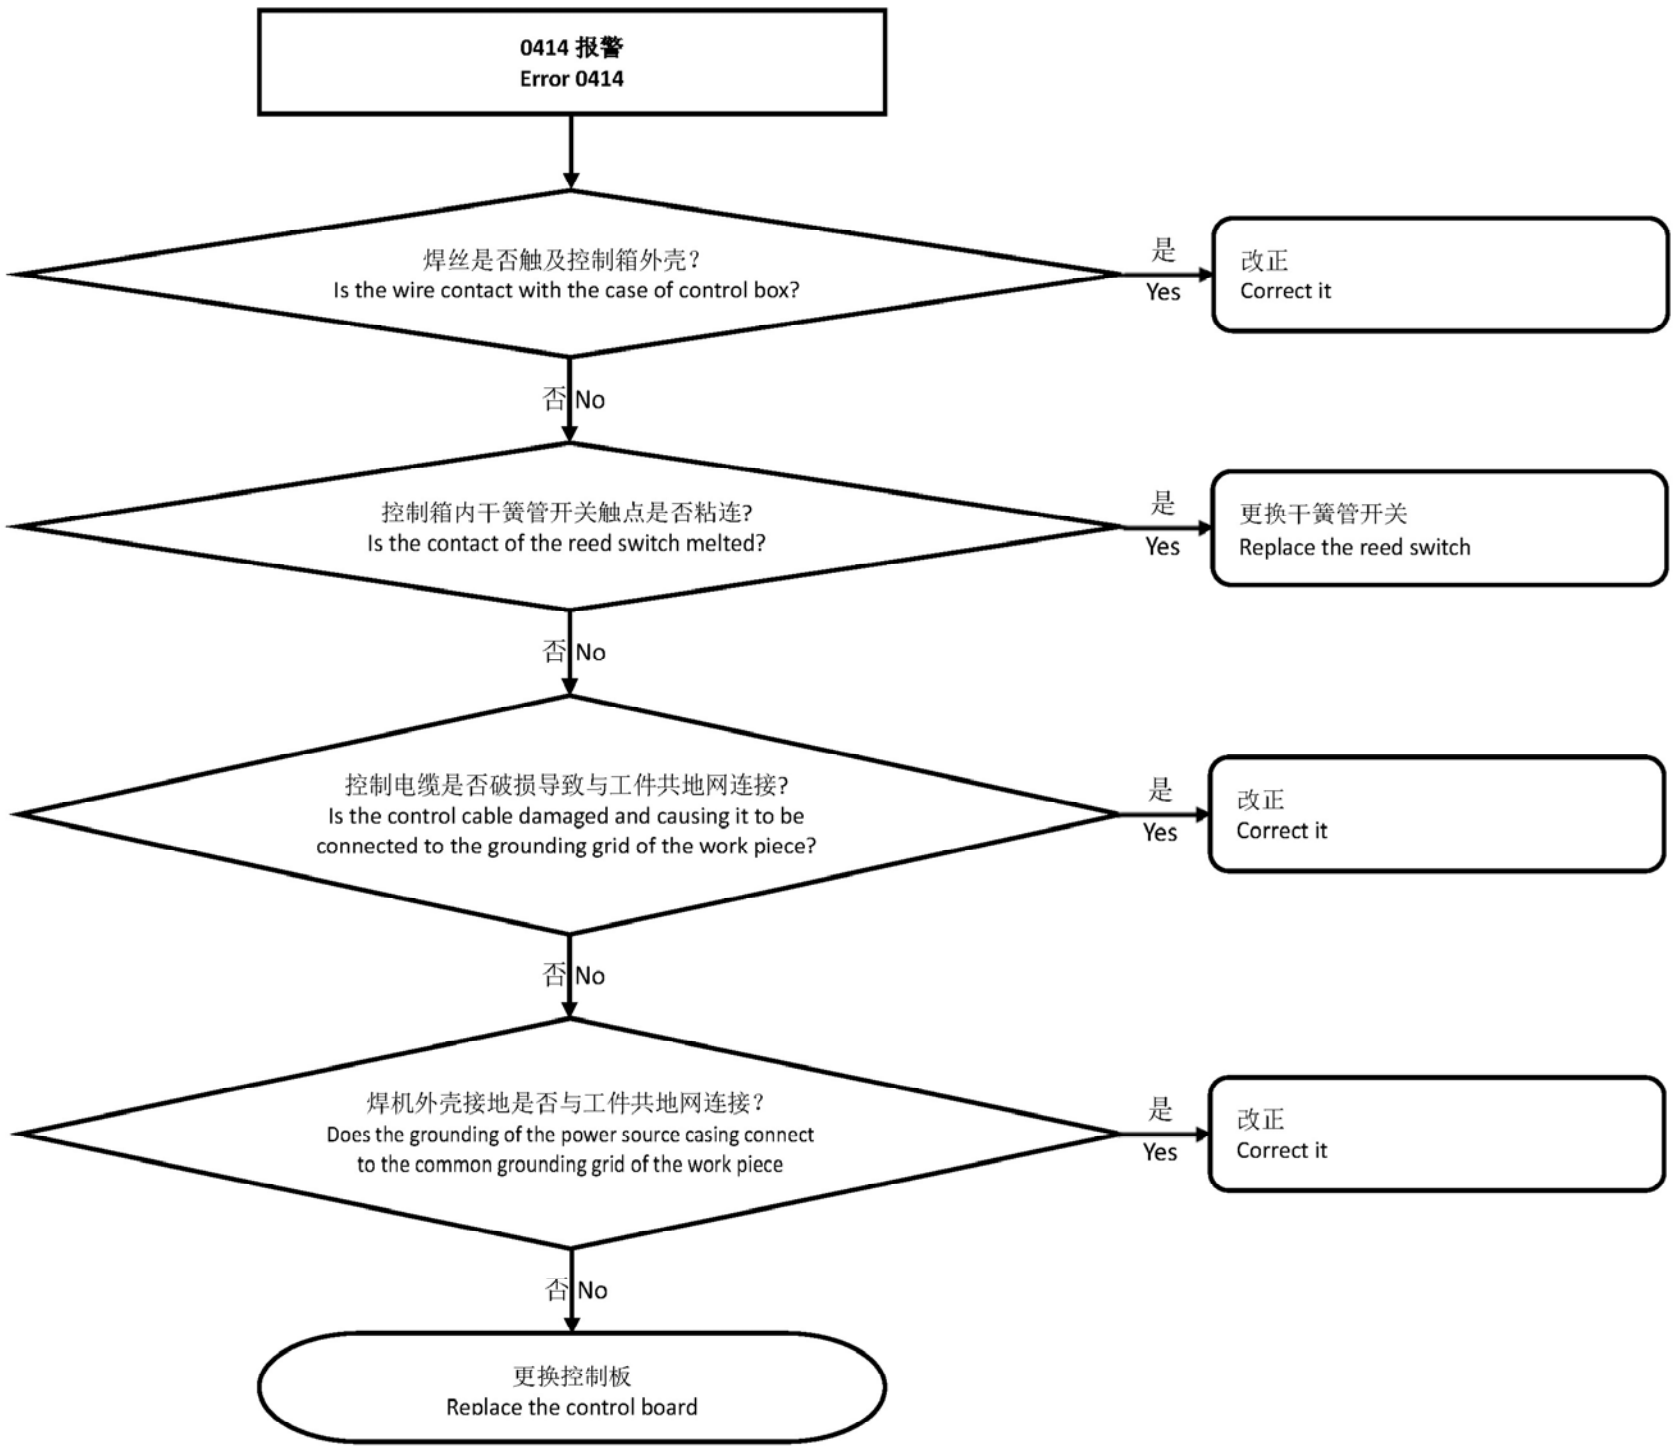

异常情况下的电流回路

焊机正-正极电缆-焊丝-控制箱外壳-控制箱内干簧管线圈-控制电缆中接地线-焊机外壳-外壳接地线-工件共地网-工件-焊机负

Current circuit under abnormal conditions

Positive terminal – Weld cable – Wire – Case of Control box – Reed switch coil – Grounding lead in control cable – Case of power source – Grounding lead of case – grounding grid of the work piece – Work piece – Negative terminal

