


POINT OF USE PANEL

In many instances a lab maybe far away from the gas supply or In many instances labs will have the gas supply in a closet or outside. The gas needs to travel several feet and the customer operator will experience unmanageable delivery pressure.

Harris Point of Use Gas Panel can be the solution to manage pressure at the process and also have a positive shut off utilizing a packless diaphragm valve outlet. They are offered in with high purity chrome plated brass and/or stainless steel bar stock regulators.

In addition, we The Harris Products can offer Point of Use Gas Panels with the regulator's inlets ports tied together for mutable outlet pressures using the same gas to different applications.

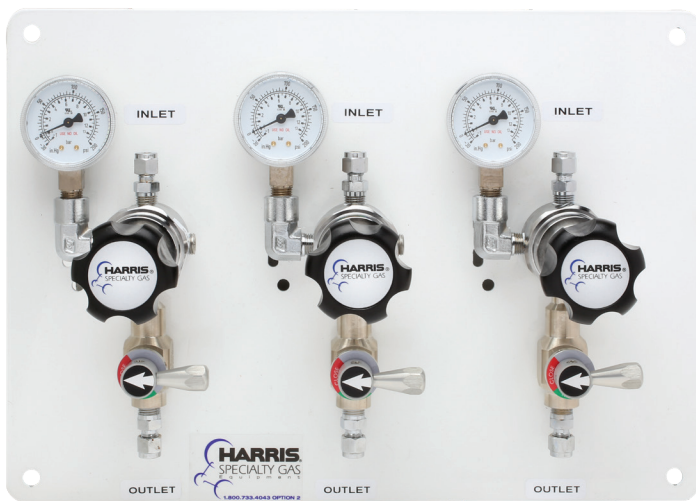

FEATURES

- Increased control of delivery pressure
- Visual indicator of pressure at the process
- On/off packless diaphragm valve with positive shutoff
- ¼ turn outlet valve with visual on/off ring
- Ability to control mutable gases in a small footprint
- Wall or benchtop mounting options
- 1 11/16" 316L stainless steel diaphragm eliminates contamination from diffusion or outgassing
- One piece encapsulated seat design includes a sintered filter to protect the seat from particulate contamination
- 2" dual scale brass gauge (psi/bar)
- Designed to 1 x 10⁻⁹ cc/sec. inboard helium leak rate to maintain gas purity levels